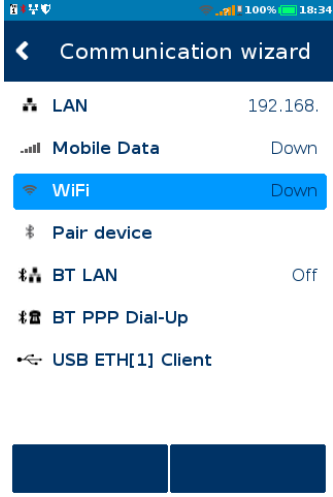
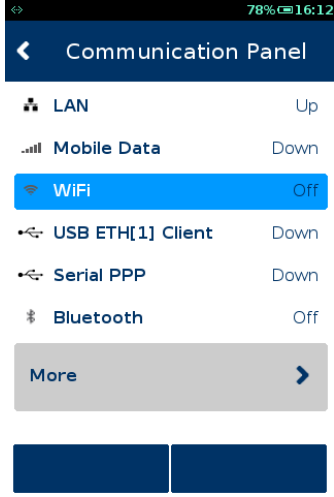

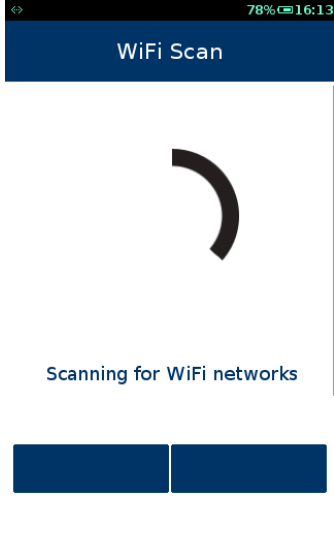
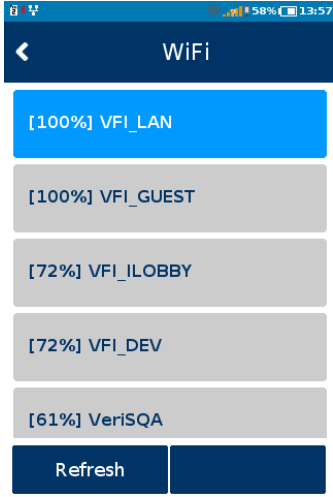
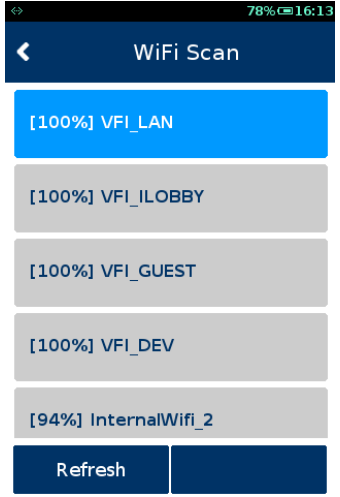
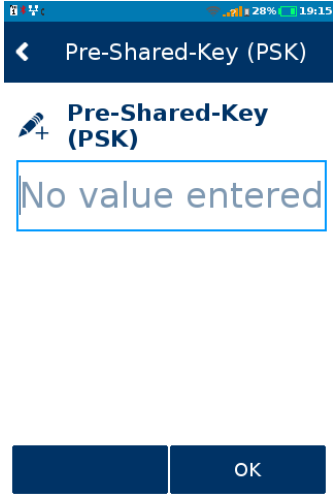





Wi-Fi

The following chapter provides instructions on how to configure the Wi-Fi connection on the V240m or V200c (If Wi-Fi is supported on the V200c).

Step	Instruction	Screen Information	Rebranded Screen Information
1	On the Communications Panel, select Wi-Fi on the touch screen.		
2	The terminal will then scan for available networks.		

Step	Instruction	Screen Information	Rebranded Screen Information
3	<p>Select your network from the available list.</p>		
4	<p>Using the terminal keypad, enter the Wi-Fi password and press OK on the touch screen to save. Check the network details are correct and press Add on the touch screen.</p> <p>Note</p> <p>Keep pressing the number that relates to the required letter. To see small caps cycle back through on the desired number pad, as necessary.</p>		

Step	Instruction	Screen Information	Rebranded Screen Information
5	The terminal now configures an interface.		
6	You will now be able to process transactions over the configured Wi-Fi connection. If you experience any issues, please contact the Merchant Helpdesk for support.	