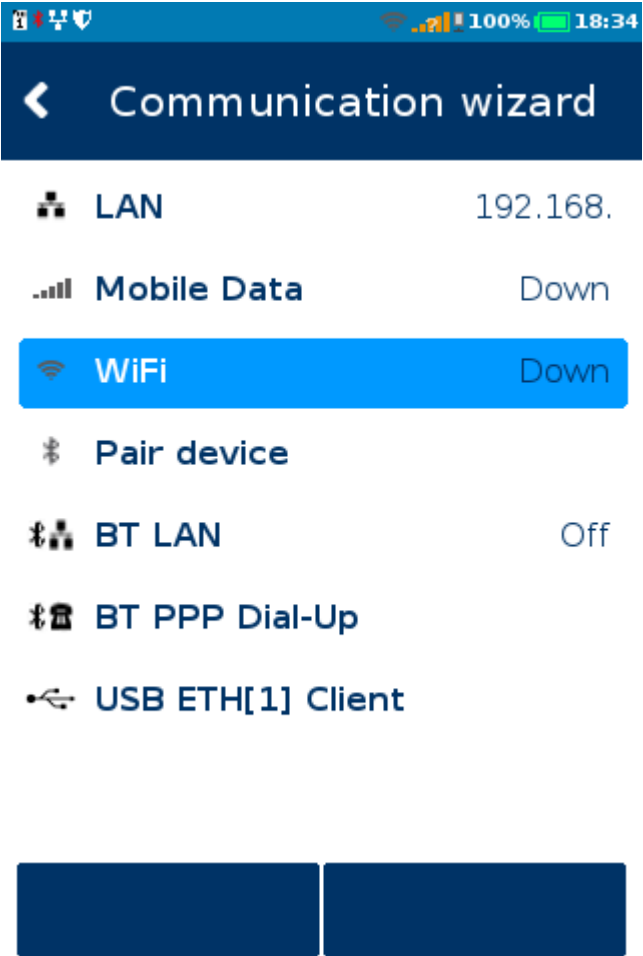
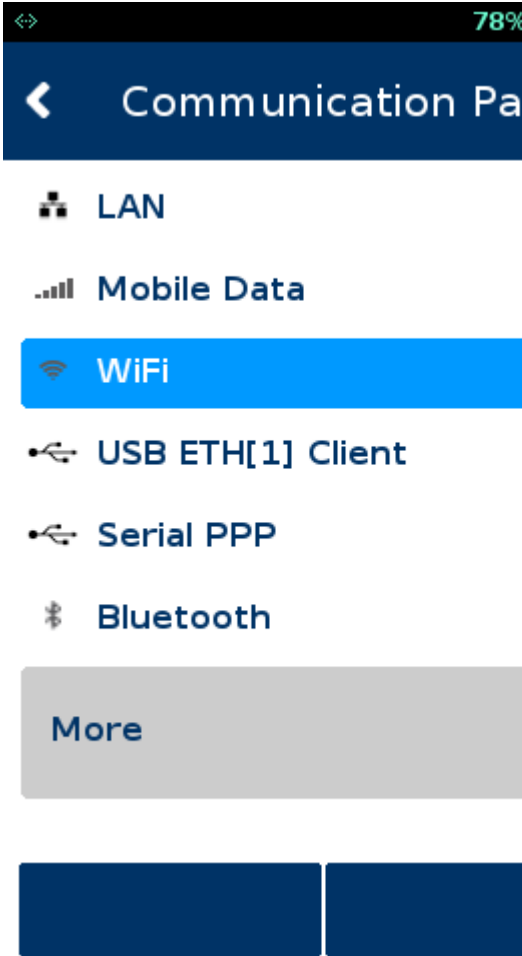


Wi-Fi

The following chapter provides instructions on how to configure the Wi-Fi connection on the V240m or V200c (If Wi-Fi is supported on the V200c).

Step	Instruction	Screen Information	Rebranded Screen Information
1	On the Communications Panel, select Wi-Fi on the touch screen.		

2

The terminal will then scan for available networks.



Step



Instruction



Screen Information

Rebranded Screen Information

3

Select your network from the available list.

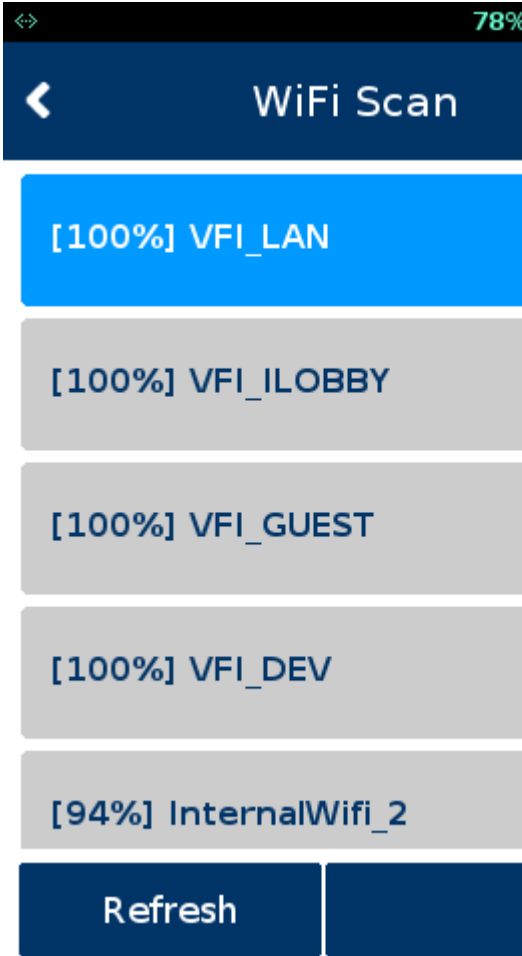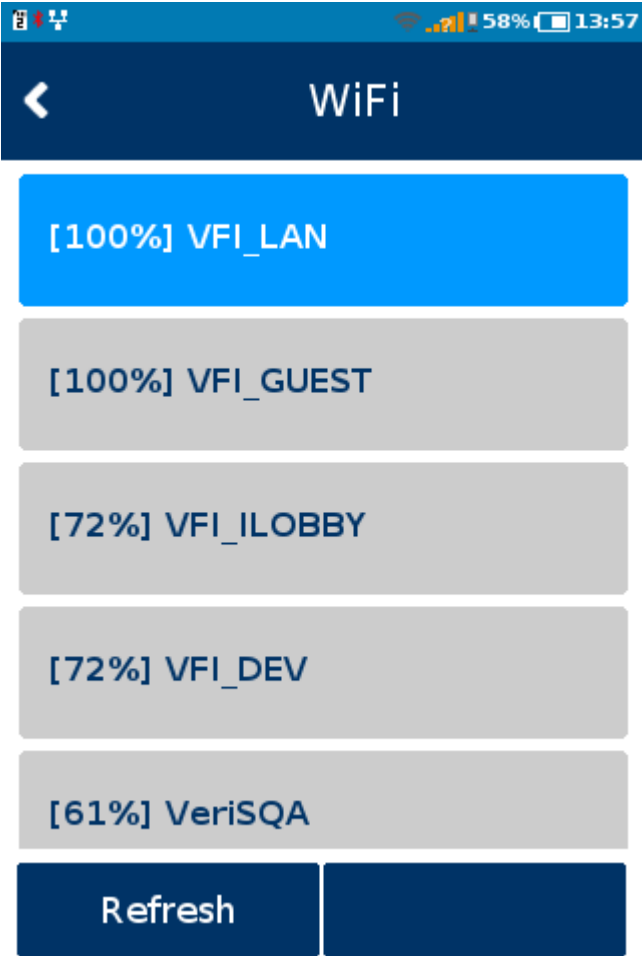

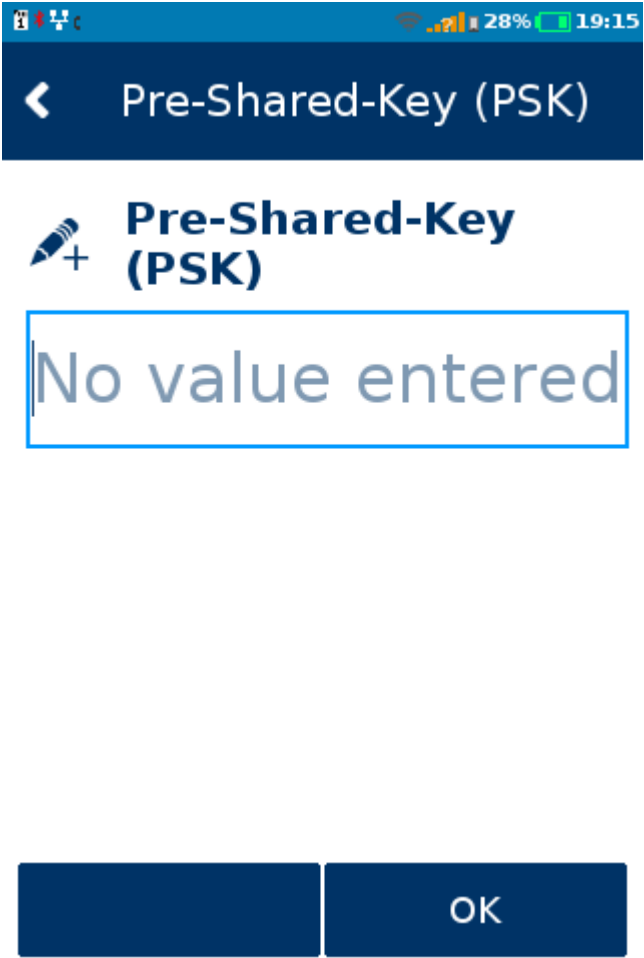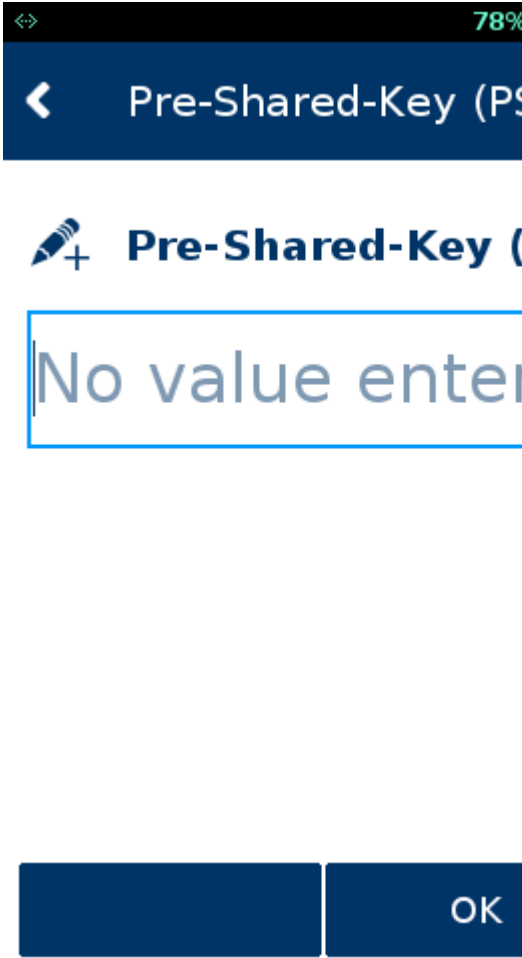Step	Instruction	Screen Information	Rebranded Screen Information
4	<p>Using the terminal keypad, enter the Wi-Fi password and press OK on the touch screen to save. Check the network details are correct and press Add on the touch screen.</p> <p>Note</p> <p>Keep pressing the number that relates to the required letter. To see small caps cycle back through on the desired number pad, as necessary.</p>		

Step	Instruction	Screen Information	Rebranded Screen Information
5	The terminal now configures an interface.	<div><div>Configure Interface</div><div><div></div></div><div>In progress</div></div>	<div><div>WiFi</div><div><div></div></div><div>Start Network Interface</div></div>
		<div><div></div><div></div></div>	<div><div></div><div></div></div>

Step



Instruction

Screen Information

Rebranded Screen Information

6

You will now be able to process transactions over the configured Wi-Fi connection. If you experience any issues, please contact the Merchant Helpdesk for support.

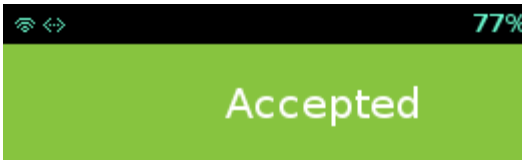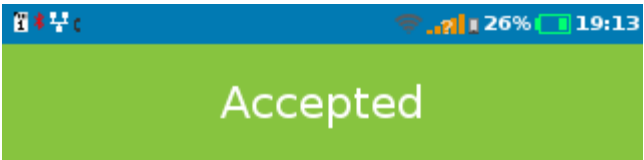

Interface started



Interface started

