






<https://verifone.cloud/docs/in-person-payments/global-payment-application-gpa/gpa-intercard-user-guide/payment-functions-0>

Updated: 25-Oct-2023

Sale

The sale transaction is performed when the customer makes a payment in exchange for goods. These transactions are usually completed using debit or credit cards.


Step	Instruction	Screen Information	Rebranded Screen Information
1	<p>The terminal is ready to start a transaction.</p> <p>Enter the sale amount and then press  key.</p>	 <p>The screen displays the Verifone logo at the top. Below it, the word "Sale" is centered. Under "Sale", the text "Enter Amount" is displayed. A large grey box shows the amount "£0.00". At the bottom, there are three buttons: a blue "X" button, a grey menu button, and a blue checkmark button.</p>	 <p>The screen displays the rebranded Verifone logo at the top. Below it, the word "Sale" is centered. Under "Sale", the text "Enter Amount" is displayed. A large grey box shows the amount "€0.00". At the bottom, there are three buttons: a white "Cancel" button, a white "Menu" button, and a green "Ok" button.</p>


Step Instruction



2



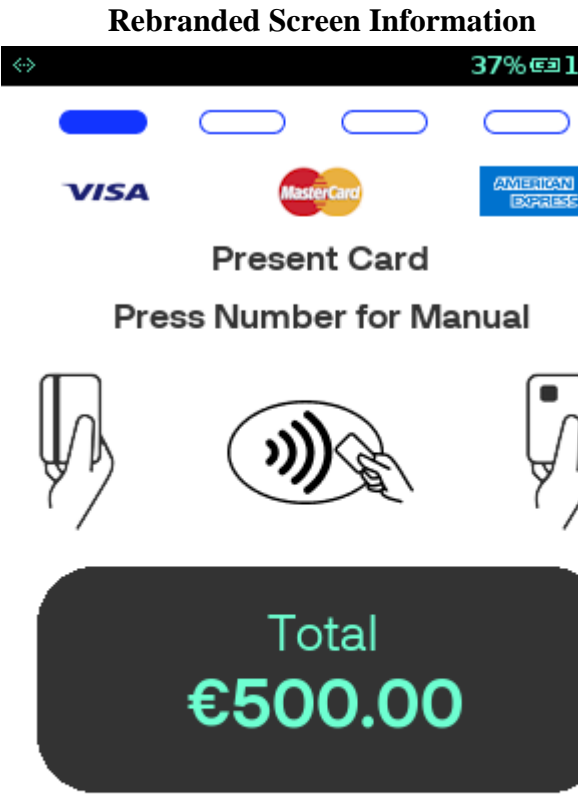

Present, insert, or swipe a card or key in the card number. Proceed to the next step.

If the card number is keyed in, proceed to step 8.

If  key is pressed, proceed to step 16.



Step	Instruction	Screen Information	Rebranded Screen Information
3	The terminal connects to the payment processing host.	 <p>Connected Sending</p>	 <p>Connected Sending</p>

Step	Instruction	Screen Information	Rebranded Screen Information
			
4	The terminal receives a response from the payment processing host.	 <p>Connected Receiving</p>	 <p>Connected Receiving</p>

Step Instruction

5

The terminal has received an approval response from the host and is printing the receipt.

If the signature verification is identified as the verification method, then proceed to step 13.

Screen Information











Approved
654321

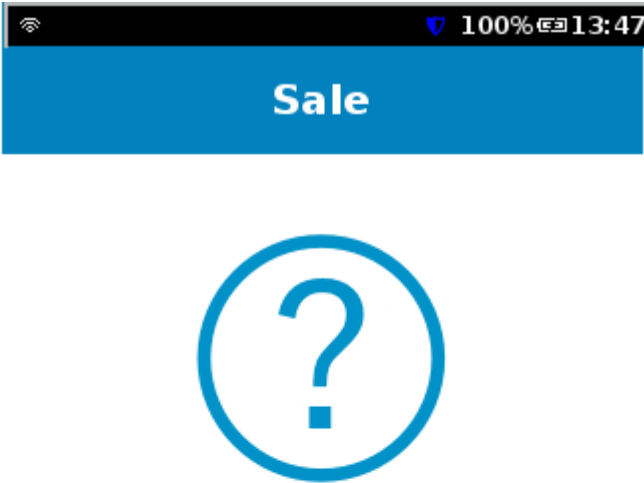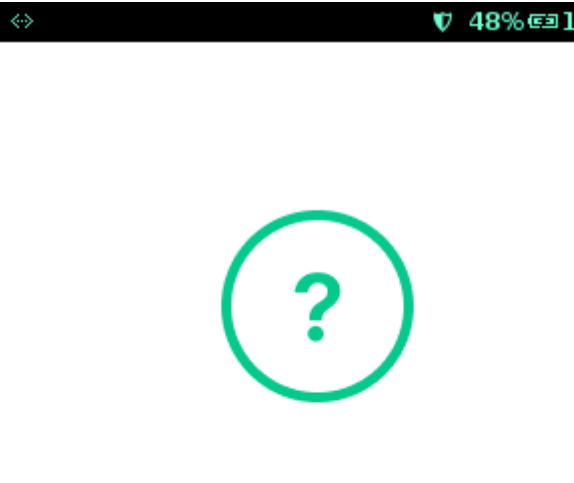Printing Please Wait

Rebranded Screen Information



Step	Instruction	Screen Information	Rebranded Screen Information
			
6	<p>Print customer receipt? Press the  key to print a customer copy.</p> <p>If not required press the  key, the terminal will revert to the idle screen.</p>		

Step	Instruction	Screen Information	Rebranded Screen Information
			


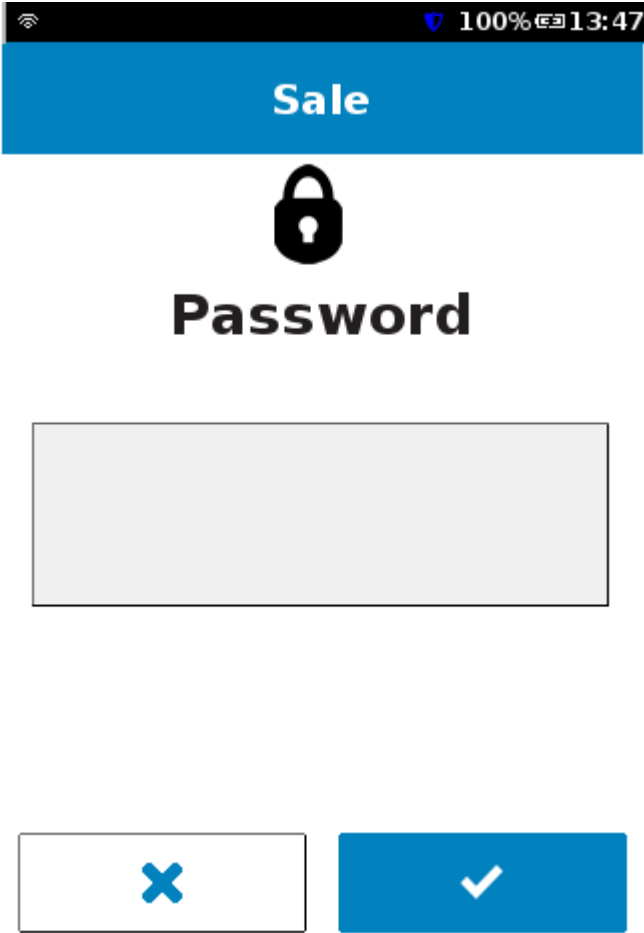
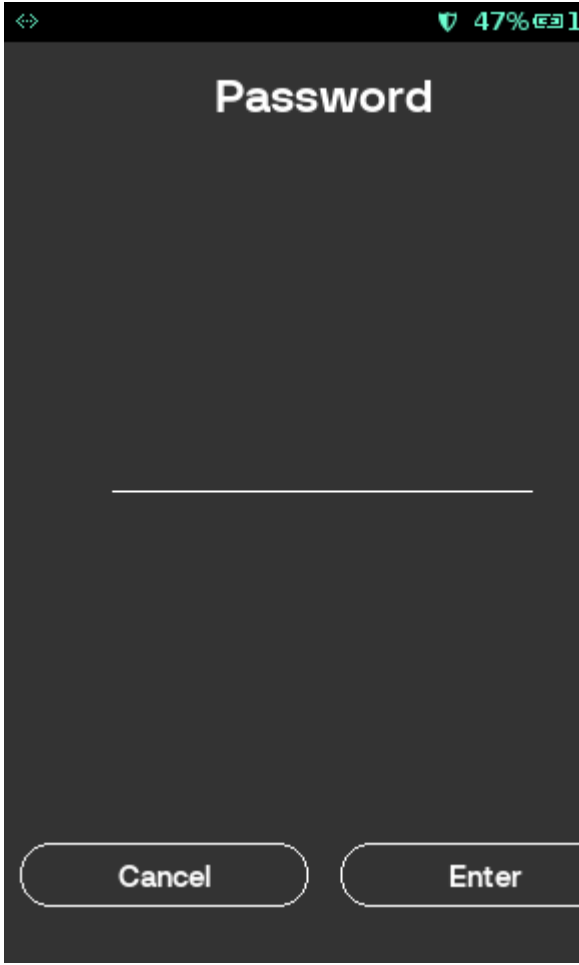
7








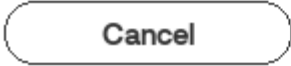

The terminal prompts the user to remove the chip card before going back to the idle screen.












Please Remove Card














Step	Instruction	Screen Information	Rebranded Screen Information
8	<p>Card Not Present / Telephone or Mail Orders – Manual card details entry</p> <p>Begin typing the card number on the payment options screen, the screen will ask for a password before switching to the manual entry screen.</p> <p>Enter the password and then press  key.</p>		

Step	Instruction	Screen Information	Rebranded Screen Information
			
	The screen will now switch to the manual entry screen.		
9	Once the card number is entered completely, press the  key to continue.		
			
			

Step	Instruction	Screen Information	Rebranded Screen Information
			
10	Enter the expiration date of the card and then press  key.		
		 	 

Step	Instruction	Screen Information	Rebranded Screen Information
11	Select option 1 or 2.	<div><div>100%13:47</div><div>Sale</div><div>Card Present Mode</div><div>1 Customer Present</div><div>2 Customer Not Present</div></div>	<div>48%13:47</div> <div>Card Present Mode</div> <div>Customer Present</div> <div>Customer Not Present</div>

Step	Instruction	Screen Information	Rebranded Screen Information
12	Enter CVV number and then press  key.		
	<p>If “Customer not present” has been selected as the card present mode in Step 11, Revert to step 6.</p> <p>If “Customer present” has been selected as the card present mode in Step 11, then the cardholder is required to sign the merchant copy of the printed receipt.</p>	 	 

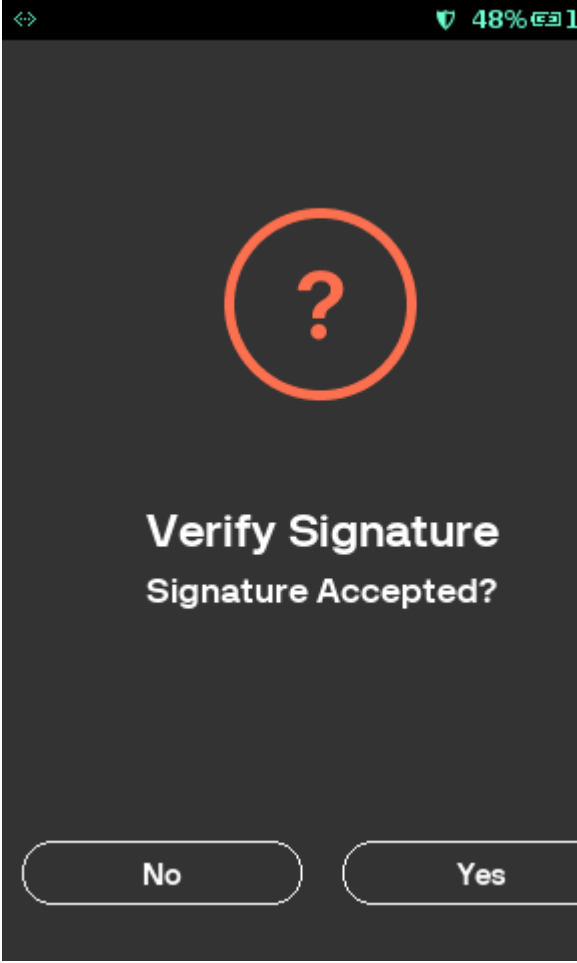Step	Instruction	Screen Information	Rebranded Screen Information
13	<p>The signature is verified by the Merchant, press  key to confirm the signature. Revert to step 6.</p> <p>If  key is pressed, proceed to step 14.</p>		

Step Instruction

14

The transaction is declined because the signature is not accepted.

Screen Information




Transaction Declined

Signature Not Accepted

Printing Please Wait

Rebranded Screen Information

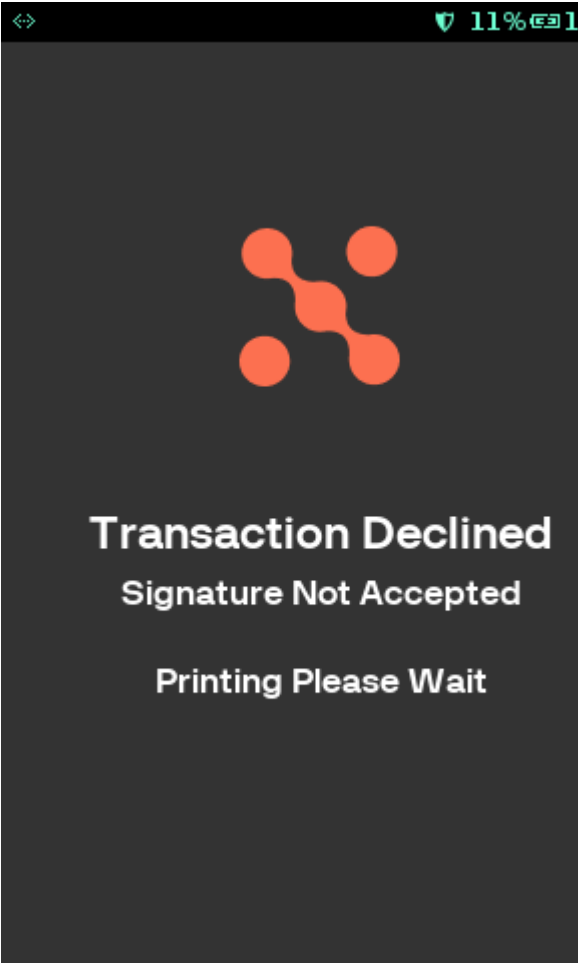


Step	Instruction	Screen Information	Rebranded Screen Information
15	Reversal is auto uploaded to the payment processing host.	<div><div>📶 100% 🔋 13:47</div><div>Uploading Reversal</div><div><div></div></div><div>Connected</div><div>Sending</div></div>	<div><div>📶 59% 🔋 13:47</div><div></div><div><div></div></div><div>Please Wait</div><div>Uploading Reversal</div></div>

Step Instruction

16

The transaction has been canceled, revert to the idle screen.

Screen Information

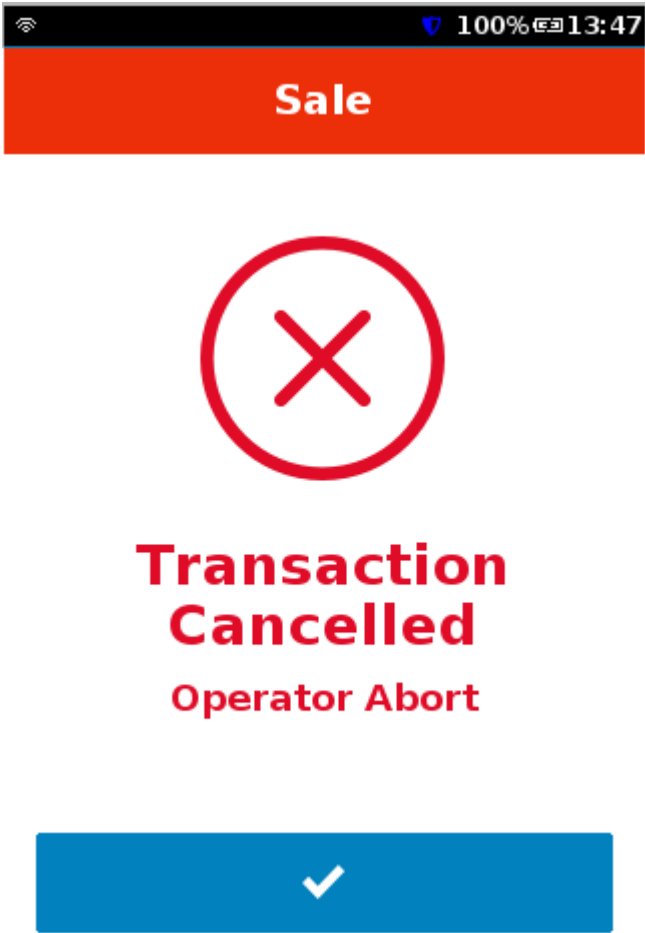

Rebranded Screen Information

