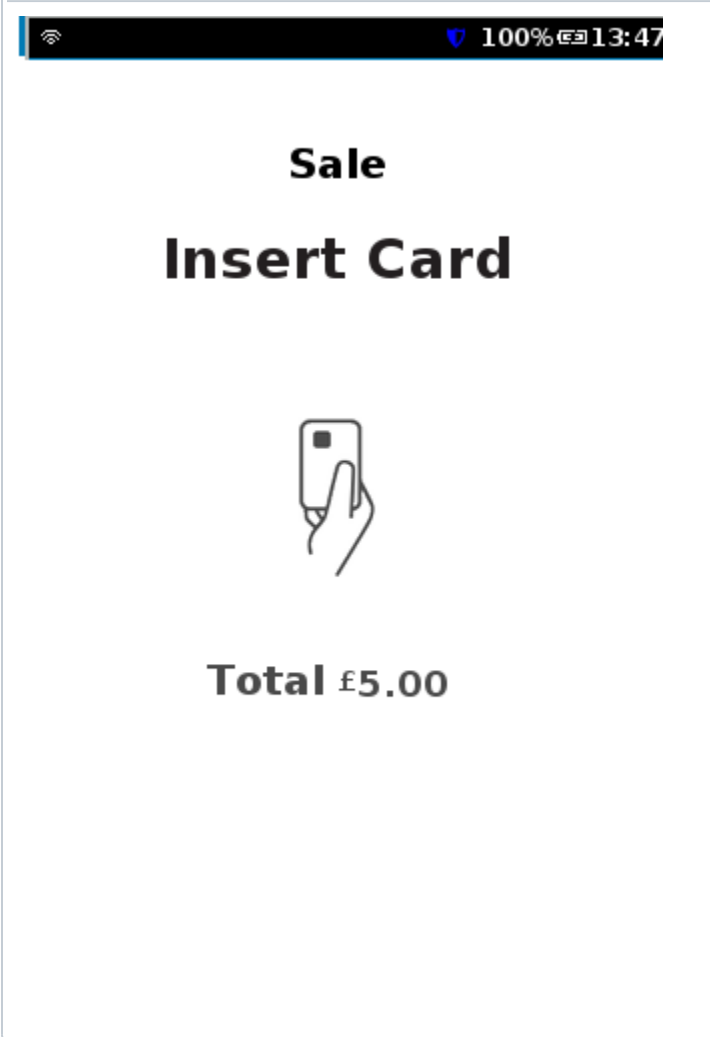
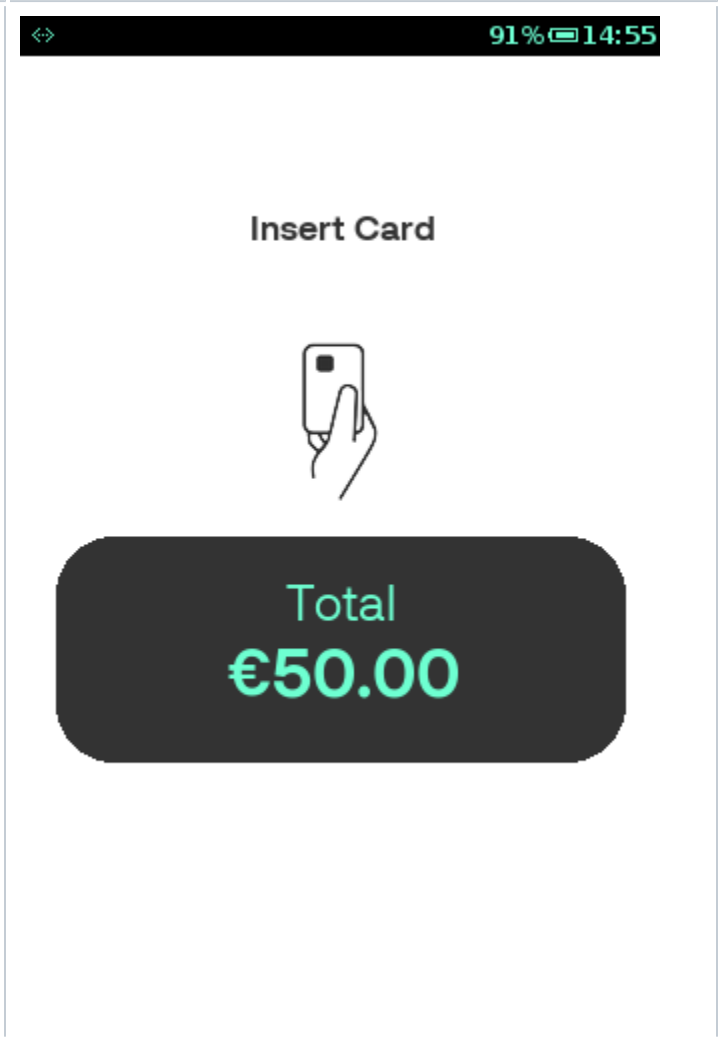


Insert Card (Chip Card Swiped)

The "Insert Card" screen is displayed when an EMV-capable card is swiped through the magnetic stripe reader. This prompts the customer to insert the chip card into the terminal.

Screen Information	Rebranded Screen Information
 <p>The standard screen shows a status bar with Wi-Fi, 100% battery, and 13:47. The main content includes the text "Sale" and "Insert Card" in large bold font. Below this is an icon of a hand holding a card. At the bottom, it displays "Total £5.00".</p>	 <p>The rebranded screen shows a status bar with Wi-Fi, 91% battery, and 14:55. The main content includes the text "Insert Card" in large bold font. Below this is an icon of a hand holding a card. At the bottom, a dark rounded rectangle contains the text "Total €50.00" in green.</p>