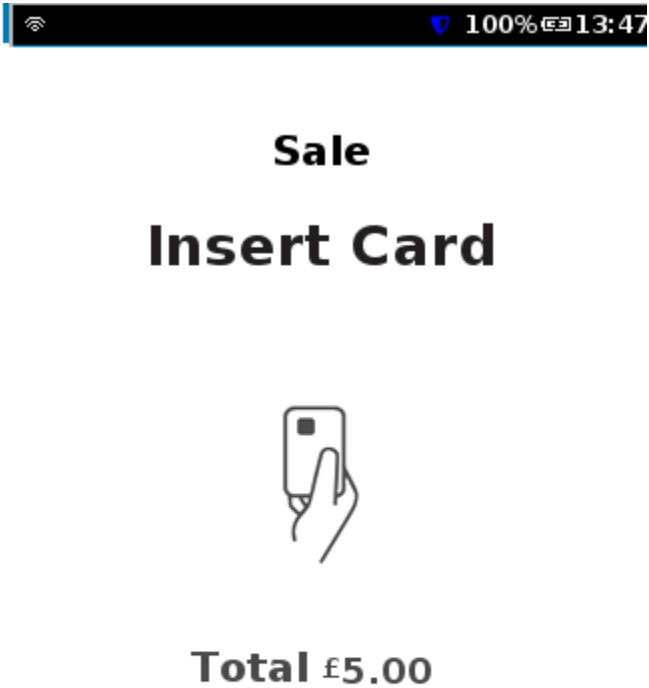
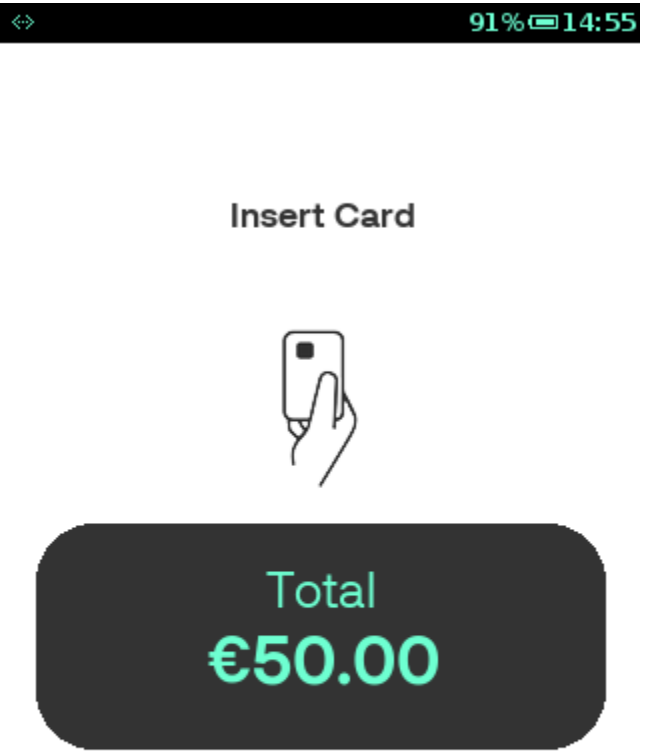


Insert Card (Chip Card Swiped)

The “Insert Card” screen is displayed when an EMV-capable card is swiped through the magnetic stripe reader. This prompts the customer to insert the chip card into the terminal.

Screen Information	Rebranded Screen Information
 <p>The standard screen displays a status bar with a Wi-Fi icon, a heart icon, 100% battery, and the time 13:47. The main text reads "Sale" and "Insert Card". Below this is an illustration of a hand inserting a card into a terminal. At the bottom, the total amount is shown as "Total £5.00".</p>	 <p>The rebranded screen displays a status bar with a double arrow icon, 91% battery, and the time 14:55. The main text reads "Insert Card". Below this is an illustration of a hand inserting a card into a terminal. At the bottom, the total amount is shown in a dark rounded rectangle as "Total €50.00".</p>