

ScannerManager.java

class ScannerManager

- The service handle for performing barcode scanning operations.

Status startScanner(BarcodeConfig config)

- Start barcode scan (async multi-scan).
 - **Parameters: configuration** – please see `BarcodeConfig`. Example: start scanner with edge trigger mode, autobEEP BarcodeConfig record to (TRIGGER_EDGE, AUTOBEEP_ON) startScanner(barcode config).

Status stopScanner()

- Stop barcode scan in multi-scan mode.