

VFIScannerManager.h

```
class VFIScannerManager : public NSObject
```

- The service handle for performing barcode scanning operations.

```
virtual nullable VFIScanner * startScanner: (nullable VFIScannerConfig *config)
```

- Start barcode scan (async multi-scan).

- **Parameters: configuration** – please see BarcodeConfig. Example: start scanner with edge trigger mode, autobeeper enabled:
`VFIScannerConfig *config = [VFIScannerConfig newWithTriggerMode:VFIScannerConfigTriggerMode_EDGE_TRIGGER_EDGE, AUTOBEEPER_ON] startScanner(barcode config).`

```
virtual nullable VFIScanner * stopScanner ()
```

- Stop barcode scan in multi-scan mode.