

ScannerManager.java

```
class ScannerManager
```

- The service handle for performing barcode scanning operations.

```
Status startScanner(BarcodeConfig config)
```

- Start barcode scan (async multi-scan).

◦ **Parameters:** **configuration** – please see BarcodeConfig. Example: start scanner with edge trigger mode, autobeep enabled: Config record to (TRIGGER_EDGE, AUTOBEEP_ON) startScanner(barcode config).

```
Status stopScanner()
```

- Stop barcode scan in multi-scan mode.