

ScannerManager.hpp

```
class ScannerManager
```

- The service handle for performing barcode scanning operations.

```
virtual std::shared_ptr<Status> startScanner(const std::optional<BarcodeConfig> &config) = 0
```

- Start barcode scan (async multi-scan).

- **Parameters: configuration** – please see BarcodeConfig. Example: start scanner with edge trigger mode, autobeeep enabled: `EDGE, AUTOBEEP_ON) startScanner(barcode config).`

```
virtual std::shared_ptr<Status> stopScanner() = 0
```

- Stop barcode scan in multi-scan mode.