

Remove All

This command removes all line items from the session memory and clears them from the screen.

Rules

The session should be active and LINEITEMDISPLAY parameter should be enabled.

Configuration Parameter

Following are the configuration parameters which affect the operation. Refer to [Application Parameters](#) table for more details on the below parameters.

- LINEITEMDISPLAY
- FULLIDISPLAYENABLED
- LIMEDIAMODE
- RECEIPTLINEITEMDISPLAY

Message Interface

Refer to the below Protocol section for the command fields description and examples.

- [REMOVEALL](#)