

Chase Parameters (CHHC and CHCS)

This section contains parameters those are unique for Chase Canada and Chase US solution.

Chase Canada (CHHC) Parameters

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Location (Table)
MERCHANTID	This parameter represents the Merchant ID, assigned by Chase Canada. NOTE: This parameter has an underscore () at the end of the name.	Numeric, 12	<blank>	Merchants
TERMINALID	This parameter represents the Terminal ID, assigned by Chase Canada. NOTE: This parameter has an underscore () at the end of the name.	Numeric, 3	<blank>	Hosts
CLIENTID	This parameter represents the Client ID, assigned by Chase Canada. NOTE: This parameter has an underscore () at the end of the name.	Numeric, 4	<blank>	Hosts
HOST_USR	This parameter is used to set the host username, assigned by Chase Canada. NOTE: This parameter has an underscore () at the end of the name.	Alphanumeric, 100	<blank>	Hosts
HOST_PWD	This parameter is used to set the host password, assigned by Chase Canada. NOTE: This parameter has an underscore () at the end of the name.	Alphanumeric, 100	<blank>	Hosts
APPLRELEASEDATE	This parameter is used to set the Application Release Date.	Numeric, 6	<delivery date>	Application

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Location (Table)
APPLRELEASENAME	This parameter is used to set the Application Release Name.	Alphanumeric, 7	<CHHC417>	Application
CUSTREFNUM	This parameter is used to enable or disable customer reference number.	• 0 - Disable • 1 - Enable	0	Application
FORCEDEBITKEYRQST	This parameter is used to determine if Force Debit key request from host is required.	• 0 - Off • 1 - On	1	Application
FORCEEMVPARAMDLD	This parameter is used to determine if Force EMV parameter download is required.	• 0 - Off • 1 - On	1	Application
POSHWID	This parameter represents POS Hardware ID that SCA Engage must send to Chase. The values should be provided by Chase. The parameter value varies for hardware and updated at device start up based on device type.	Alphanumeric, 4	<varies per Hardware>	Application
POSSWID	This parameter represents POS Software ID that SCA Engage must send to Chase. The values should be provided by Chase. The parameter value varies for application version.	Alphanumeric, 4	01FF	Application
DYNAMICPWENABLED	This parameter is used to enable or disable Dynamic password flag. NOTE: This parameter has an underscore (_) at the end of the name.	• 0 - Off • 1 - On	0	Hosts

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Location (Table)
GIFTPARTIALAUTH	This parameter is used to enable or disable Gift partial authorization flag. NOTE: This parameter has an underscore (_) at the end of the name.	• 0 - Off • 1 - On	1	Hosts
CTLSIGLINE	This parameter is used to enable or disable Contactless signature line flag.	• 0 - Disable • 1 - Enable	1	Application
CNTSIGLINE	This parameter is used to enable or disable Contact signature line flag.	• 0 - Disable • 1 - Enable	1	Application
REFUNDALLOWED	This parameter is used to enable or disable refund operation.	• 0 - Disable • 1 - Enable	1	
VOIDALLOWED	This parameter is used to enable or disable Void operation.	• 0 - Disable • 1 - Enable	1	
FORCEALLOWED	This parameter is used to enable or disable Force operation.	• 0 - Disable • 1 - Enable	1	
TABALLOWED	This parameter is used to enable or disable Tab operation.	• 0 - Disable • 1 - Enable	1	
AUTHALLOWED	This parameter is used to enable or disable Authorization operation.	• 0 - Disable • 1 - Enable	1	
DYNAMICPWENABLED	This parameter is used to enable or disable dynamic password.	• 0 - Disable • 1 - Enable	0	Hosts

Chase US (CHCS) Parameters

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Location (Table)
--------------------------------	-------------	------------------	---------------	------------------

MERCHANTID	This parameter represents the Merchant ID, assigned by Chase US. The parameter value will vary for merchants. NOTE: This parameter has an underscore (_) at the end of the name.	Numeric, 12 characters	<blank>	Merchants
TERMINALID	This parameter represents the Terminal ID, assigned by Chase US. The parameter value will vary for merchants. NOTE: This parameter has an underscore (_) at the end of the name.	Numeric, 3 characters	<blank>	Hosts
HOST_USR	This parameter is used to set the host username, assigned by Chase US. This will vary for merchants. NOTE: This parameter has an underscore (_) at the end of the name.	Alphanumeric, 100 characters	<blank>	Hosts
HOST_PWD	This parameter is used to set the host password, assigned by Chase US. This will vary for merchants. NOTE: This parameter has an underscore (_) at the end of the name.	Alphanumeric, 100 characters	<blank>	Hosts
APPLRELEASEDATE	This parameter is used to set the Application Release Date.	Numeric, 6 characters	<delivery date>	Application
APPLRELEASENAME	This parameter is used to set the Application Release Name.	Alphanumeric, 7 characters	CHCS411	Application
CUSTREFNUM	This parameter is used to enable or disable customer reference number.	Boolean, 30 characters	none	Application

FORCEDEBITKEYRQST	This parameter is used to determine if Force Debit key request from host is required.	• 0 - Off • 1 - On	1	Application
FORCEEMVPARAMDLD	This parameter is used to determine if Force EMV parameter download is required. NOTE: Force EMV parameter download is always defaulted to 1.	• 0 - Off • 1 - On	1	Application
ForceNetworkConfigure	This parameter is used to set the flag for force network configuration.	• 0 - Off (do not force) • 1 - On (force)	0	
POSHWID	This parameter represents POS Hardware ID that SCA Engage must send to Chase. The values should be provided by Chase. The parameter value varies for hardware and updated at device start up based on device type.	Alphanumeric, 4 characters	01A4	Application
POSSWID	This parameter represents POS Software ID that SCA Engage must send to Chase. The values should be provided by Chase. The parameter value varies for application version.	Alphanumeric, 4 characters	021E	Application
PARTIALAUTH	This parameter is used to enable or disable partial authorization. NOTE: This parameter has an underscore (_) at the end of the name.	• 0 - Off • 1 - On	1	Hosts
REFUNDALLOWED	This parameter is used to enable Refund operation.	• 0 - Disable • 1 - Enable	1	

VOIDALLOWED	This parameter is used to enable or disable Void operation.	• 0 - Disable • 1 - Enable	1	
FORCEALLOWED	This parameter is used to enable or disable Force operation.	• 0 - Disable • 1 - Enable	1	
TABALLOWED	This parameter is used to enable or disable Tab operation.	• 0 - Disable • 1 - Enable	1	
AUTHALLOWED	This parameter is used to enable or disable Authorization operation.	• 0 - Disable • 1 - Enable	1	
DYNAMICPWENABLED	This parameter is used to enable or disable dynamic password.	• 0 - Disable • 1 - Enable	0	Hosts