

## UDT Parameters

This table describes the required parameters used for UDT as in UDT.INI. Each record contains the following parameters.

Note

The listed parameters have underscore ( \_ ) at the end of the name.

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name as in UDT.INI
CLERKID	This parameter is used to set the clerk ID and the value can vary from 1 to 6 numeric character. Clerk ID can be added and deleted through ADD or DEL menu item present in Clerk/Sever menu.	Numeric, 4	NA	ClerkId
CLERKPASSWORD	This parameter controls the current password for each Clerk ID. Password can be updated through Modify clerk password menu item and also while adding the Clerk.	Alphanumeric, 5 - 10 characters	NA	Password