

## Authorization Parameters

This table describes the required parameters used for Authorization.

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
MANAGERPASSWORD	Manager's Password (Password entry for SCA Setup menu and Menu items)	Alphanumeric, 10 (minimum entry 5 characters and/or digits)	166831	ManagerPW
SUPERVISORPW	Supervisor Password (Password entry for SCA Setup menu and Menu items)	Alphanumeric, 10 (minimum entry 5 characters and/or digits)	123456	SupervisorPW
REFUNDPW	This parameter is used to enable or disable password for Refund. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	refundpw
VOIDPW	This parameter is used to enable or disable password for Void. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	voidpw
SETTLEPW	This parameter is used to enable or disable password for Settle. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	settlepw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
FORCEPW	This parameter is used to enable or disable password for Force. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	1	forcepw
SALEPW	This parameter is used to enable or disable password for Sale. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	salepw
PHONEPW	This parameter is used to enable or disable password for Phone Order. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	phonepw
TABPW	This parameter is used to enable or disable password for tab (Open tab/Close Tab/Delete Tab). <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	tabpw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
REPRINTPW	This parameter is used to enable or disable password for Reprint. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	reprintpw
REPORTSPW	This parameter is used to enable or disable password for Reports. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	reportspw
BATCHREVIEWPW	This parameter is used to enable or disable password for batchreview. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	batchreviewpw
BALANCEPW	This parameter is used to enable or disable password for Balance. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	balancepw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
AUTHPW	This parameter is used to enable or disable password for Authorization. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	authpw
MANUAENTRYPW	This parameter is used to enable or disable password for Manual Entry. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>	0	manualentrypassword
TIPADJUSTPW	This parameter is used to enable or disable password for Tip Adjust. <b>NOTE:</b> This is applicable to STANDALONE only.	<ul style="list-style-type: none"> <li>• 0 - No Password</li> <li>• 1 - Custom/Host specific level</li> <li>• 2 - Manager password level</li> <li>• 3 - Supervisor password level</li> <li>• 4 - Clerk password level</li> </ul>	0	tipadjustpw