

## OptFlags Parameters

This table describes the required parameters used for optional flags configurations.

| Config.usr1/Parameter<br>DLD Name | Description                                                                                                                                                                                                                                                          | Valid/Max Values                                                                                   | Default<br>Value                                                       | Name in<br>PropertiesData.xml |
|-----------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|-------------------------------|
| AMEXCTLS                          | This parameter set the Amex CTLS TTQ value or mode.                                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>1 - CTLS MSD Mode</li> <li>2 - CTLS MSD/EMV Mode</li> </ul> | 2                                                                      | AMEXCTLS                      |
| CONTACTLESSEENABLED               | This parameter is used to enable or disable contactless processing.                                                                                                                                                                                                  | <ul style="list-style-type: none"> <li>0 - Disable</li> <li>1 - Enable</li> </ul>                  | 1                                                                      | CTLSEnable                    |
| DPASTTQ                           | This parameter sets the DPAs TTQ value or Mode for accepting EMV CTLS cards (TTQ = Terminal Transaction Qualifier).                                                                                                                                                  | <ul style="list-style-type: none"> <li>1 - MSD</li> <li>2 - MSD/EMV</li> <li>3 - EMV</li> </ul>    | <ul style="list-style-type: none"> <li>1</li> <li>3 for UGP</li> </ul> | DPASTTQ                       |
| FastPayment                       | Quick payment service eliminates the need for signatures in a fast paced environment. Customer will not be asked to provide a signature for transactions above the configured CVM limit. The service is designed to speed up the time customers are waiting in line. | <ul style="list-style-type: none"> <li>0 - Disable</li> <li>1 - Enable</li> </ul>                  | 0                                                                      | FastPayment                   |
| MCMChip                           | Reserved for future use. This parameter sets the McMCHIP TTQ value or Mode for accepting EMV CTLS cards                                                                                                                                                              | <ul style="list-style-type: none"> <li>1 - MSD</li> <li>2 - MSD/EMV</li> </ul>                     | 1                                                                      | MCMChip                       |

| Config.usr1/Parameter<br>DLD Name | Description                                                                                                                                                                                                                                 | Valid/Max Values                                                                                                                       | Default<br>Value | Name in<br>PropertiesData.xml |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|------------------|-------------------------------|
| MobileSupport                     | Future use. This parameter is used to enable or disable mobile support.                                                                                                                                                                     | <ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>                                                  | 1                | MobileSupport                 |
| OPTINVISADEBIT                    | This parameter is used to enable or disable Visa Debit opt out option for cards with country code of CAN.                                                                                                                                   | <ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>                                                  | 1                | VisaDebit                     |
| PDOLSupport                       | This parameter is used to enable or disable support of Processing Options Data object List – tags in this object list are provided by the terminal to be processed as part of the GPO. This data is necessary to begin processing EMV data. | <ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>                                                  | 0                | PDOLSupport                   |
| SoftCardSupport                   | This parameter is used to enable or disable Soft Card NFC support.                                                                                                                                                                          | <ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>                                                  | 0                | SoftCardSupport               |
| ValueLinkSupport                  | This parameter is used to enable or disable ValueLink gift card support.                                                                                                                                                                    | <ul style="list-style-type: none"> <li>• 0 - Disable</li> <li>• 1 - Enable</li> </ul>                                                  | 0                | ValueLinkSupport              |
| VISATTQ                           | This parameter sets the Visa TTQ value or Mode for accepting EMV CTLS cards.                                                                                                                                                                | <ul style="list-style-type: none"> <li>• 1 - MSD</li> <li>• 2 - MSD/qVSDC</li> <li>• 3 - qVSDC</li> <li>• 9 - Not supported</li> </ul> | 3                | VisaTTQ                       |