

AppConfig Parameters

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
CAMCORE_LANGLIST	<p>This parameter is used to set the language for CAM. The user can set the value in config.usr1 using this parameter. CAMCORE.INI would read the value from config.usr1 and display the language for the screens like Card Read, Host Response, Pin Entry or Tip.</p> <p>CAMCORE_LANGLIST depends on the default value set in CAMCORE.INI and the user can change it by adding this parameter.</p>	Alphabetic, 6 <ul style="list-style-type: none"> • en - English • fr - French • es - Espanol • de - German • ru - Russian • pt - Portuguese • it - Italian 		LANGLIST
FORCEINITEMV	<p>This parameter is used for forced EMV initialization, only when AMEXCTL and VISATTQ parameter (OptFlags Parameters) values are required to set other than the default values.</p> <p>By default, FORCEINITEMV parameter value is set to NO.</p>	<ul style="list-style-type: none"> • YES • NO 	NO	FORCEINITEMV