



[https://verifone.cloud/docs/sca-functional-specification/config\\_params/general\\_params/udt\\_params](https://verifone.cloud/docs/sca-functional-specification/config_params/general_params/udt_params)

Updated: 20-May-2025

## UDT Parameters

This table describes the required parameters used for UDT as in UDT.INI. Each record contains the following parameters.

Note

The listed parameters have underscore (\_) at the end of the name.

<b>Config.usr1/Parameter DLD Name</b>	<b>Description</b>	<b>Valid/Max Values</b>	<b>Default Value</b>	<b>Name as in UDT.INI</b>
CLERKID	This parameter is used to set the clerk ID and the value can vary from 1 to 6 numeric character. Clerk ID can be added and deleted through ADD or DEL menu item present in Clerk/Sever menu.	Numeric, 4	NA	ClerkId
CLERKPASSWORD	This parameter controls the current password for each Clerk ID. Password can be updated through Modify clerk password menu item and also while adding the Clerk.	Alphanumeric, 5 - 10 characters	NA	Password