



https://verifone.cloud/docs/sca-functional-specification/config_params/general_params/authorization_params

Updated: 20-May-2025

Authorization Parameters

This table describes the required parameters used for Authorization.

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
MANAGERPASSWORD	Manager's Password (Password entry for SCA Setup menu and Menu items)	Alphanumeric, 10 (minimum entry 5 characters and/or digits)	166831	ManagerPW
SUPERVISORPW	Supervisor Password (Password entry for SCA Setup menu and Menu items)	Alphanumeric, 10 (minimum entry 5 characters and/or digits)	123456	SupervisorPW
REFUNDPW	This parameter is used to enable or disable password for Refund. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none">• 0 – No Password• 1 – Custom/Host specific level• 2 – Manager password level• 3 – Supervisor password level• 4 – Clerk password level	0	refundpw
VOIDPW	This parameter is used to enable or disable password for Void. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none">• 0 – No Password• 1 – Custom/Host specific level• 2 – Manager password level• 3 – Supervisor password level• 4 – Clerk password level	0	voidpw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
SETTLEPW	This parameter is used to enable or disable password for Settle. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	settlepw
FORCEPW	This parameter is used to enable or disable password for Force. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	1	forcepw
SALEPW	This parameter is used to enable or disable password for Sale. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	salepw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
PHONEPW	This parameter is used to enable or disable password for Phone Order. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	phonepw
TABPW	This parameter is used to enable or disable password for tab (Open tab/Close Tab/Delete Tab). NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	tabpw
REPRINTPW	This parameter is used to enable or disable password for Reprint. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	reprintpw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
REPORTSPW	This parameter is used to enable or disable password for Reports. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	reportspw
BATCHREVIEWPW	This parameter is used to enable or disable password for batchreview. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	batchreviewpw
BALANCEPW	This parameter is used to enable or disable password for Balance. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	balancepw

Config.usr1/Parameter DLD Name	Description	Valid/Max Values	Default Value	Name in PropertiesData.xml
AUTHPW	This parameter is used to enable or disable password for Authorization. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	authpw
MANUAENTRYPW	This parameter is used to enable or disable password for Manual Entry. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – Disable • 1 – Enable 	0	manualentrypassword
TIPADJUSTPW	This parameter is used to enable or disable password for Tip Adjust. NOTE: This is applicable to STANDALONE only.	<ul style="list-style-type: none"> • 0 – No Password • 1 – Custom/Host specific level • 2 – Manager password level • 3 – Supervisor password level • 4 – Clerk password level 	0	tipadjustpw