

## **P200/V200/e285 - User Interface**

### **Idle Screen**

The Idle Screen displays upon device power up, after reboot, and after transaction completion. SCA supports the following merchant controlled media areas: Idle Screen Video, Idle Screen Animation, and Idle Screen Full Image.




Note

Refer to [Media File - Size and Formats](#) for more information on Idle screen resolutions and media files.

### **Register POS**

**Display**

**Description**

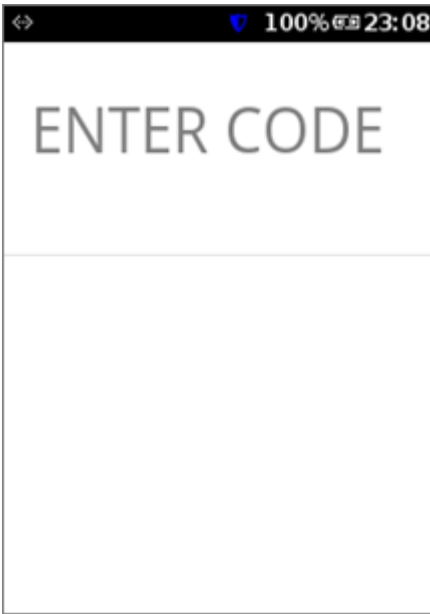

REGISTER command sends a 4-digit code to the device. Enter this code to register the POS. Once registered, the POS should run the Test MAC command to confirm the pairing worked.


## Line Items Screen

The Line Item Screen displays when the POS sends start transaction message or interactively as the POS scans line items. The key line item display fields are:

### Description

- Quantity
- Description
- Unit Price
- Extended Price
- Running Tax Total
- Running Sub Total (optional)
- Coupons or Discounts

### Display

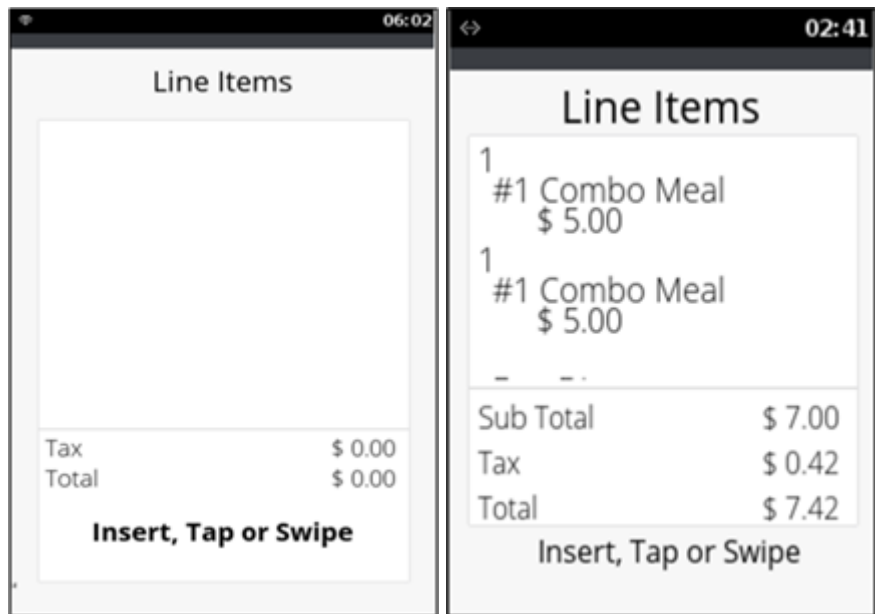

Note

Refer to [Media File - Size and Formats](#) for more information on Line Item screen resolutions and media files.


## Transaction Flows

**Sale (EMV CT and CTLS with Quick chip enabled)**


**Sale - Tap**

**Display**

**Description**

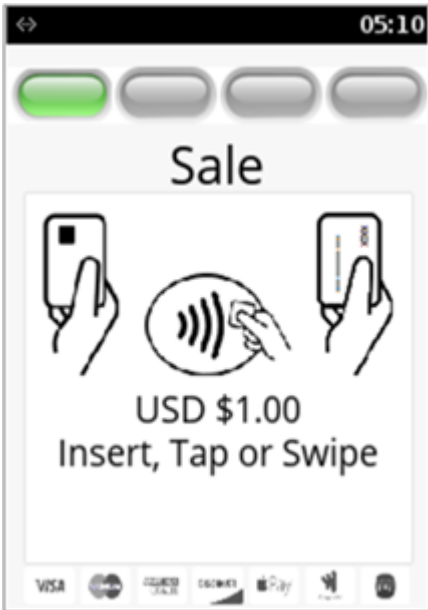


Select the card entry mode: Tap

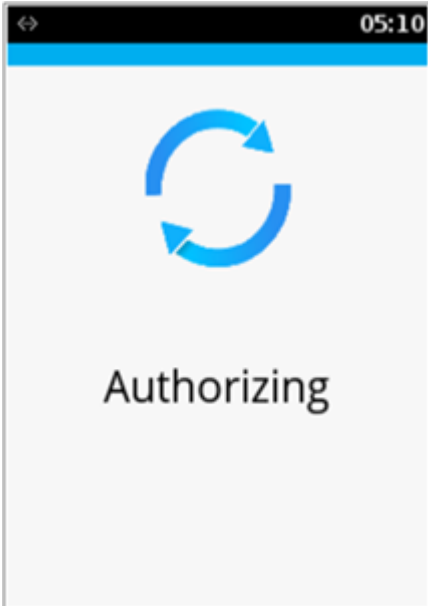

Authorization in progress screen.

### Display

### Description

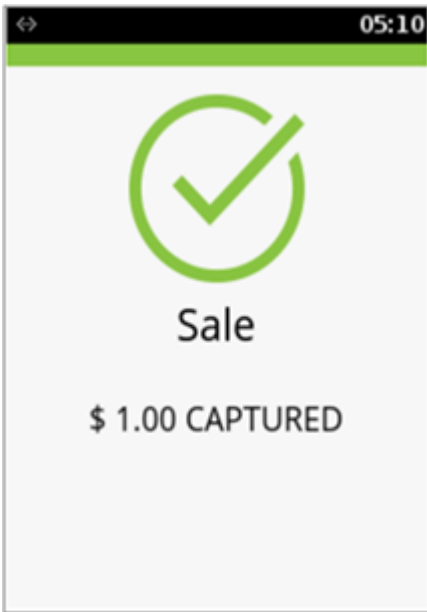

Transaction is approved screen. After the transaction is complete, the device will return to the Idle Screen.

### Sale - Insert

### Display


### Description




Select the card entry mode: Insert or Swipe.

## Display

## Description

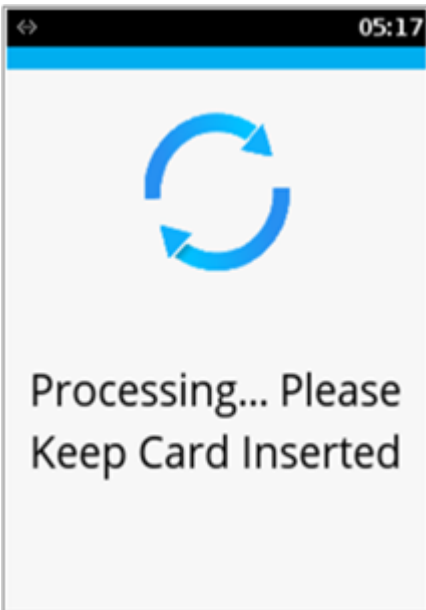


Processing screen and card should be inserted.

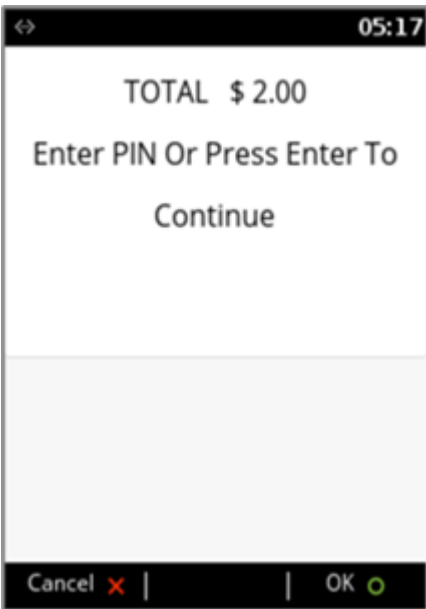


Tap the text box for keyboard input and type the PIN or press the Enter key to continue to next screen.

## Display

## Description

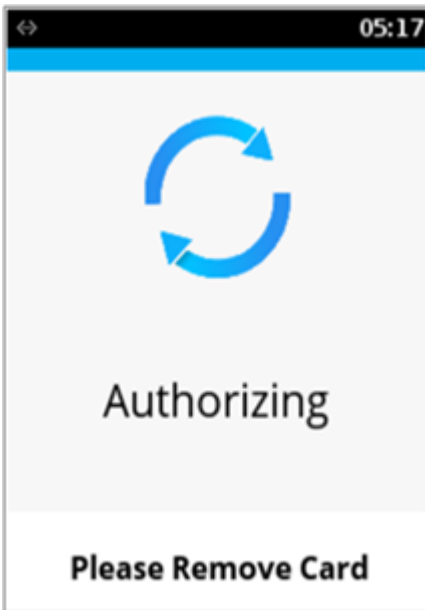


Authorization in progress screen.

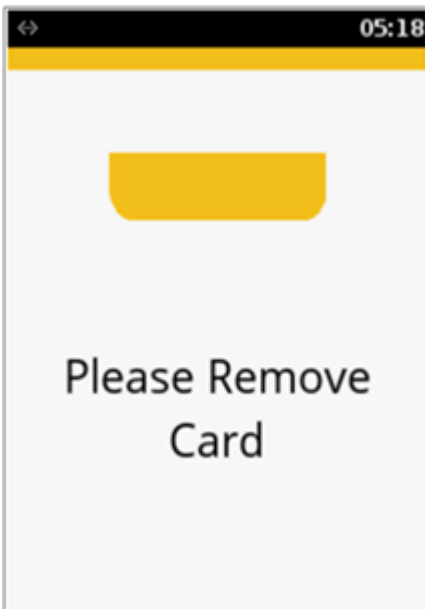


The transaction is completed and the card can be removed. After the card is removed the status screen is displayed, until the next command is sent.

**Display**

**Description**

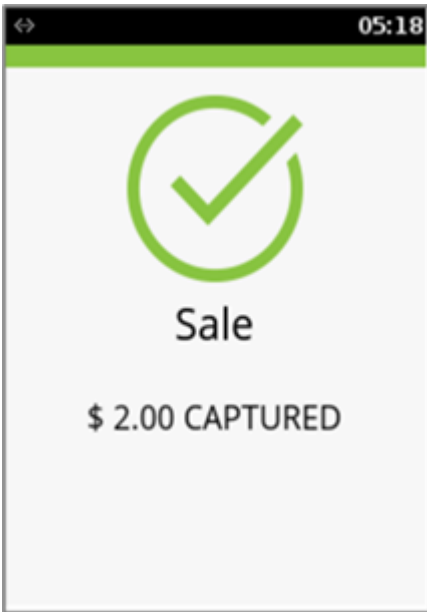

This is the Status screen as Sale Approved.

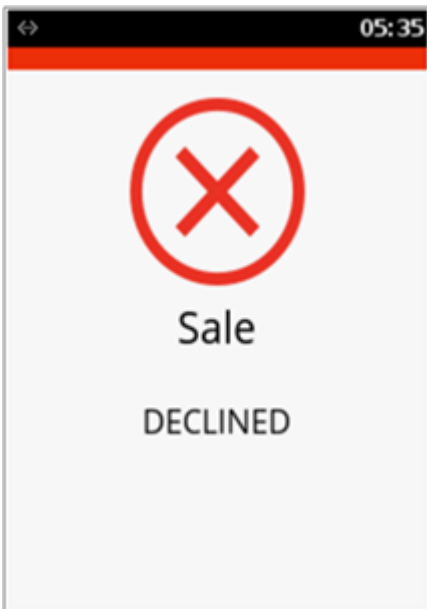


This is the Status screen as Sale Declined.

**Sale - Manual Entry** - For the transactions with manual card entry, following are the additional screens to gather card details.


After three failed card swipe attempts, SCA will display 'Please Wait for the Cashier'. If the merchant configuration is enabled, then the device may next prompt for manual card entry.

**Display**

**Description**

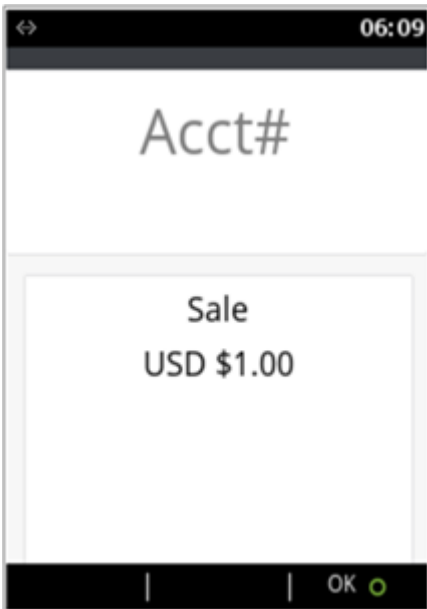

Tap the text box for keyboard input and type card number. Press the green Enter key on the device keyboard to proceed to Card Type selection screen.

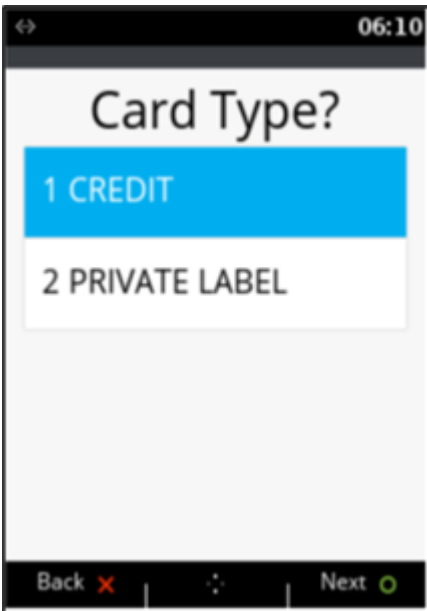


Select the Card type and proceed to next screen.



Tap the text box for keyboard input and type the expiration date in MMYY format. Press the green Enter key on the device keyboard. The device will next prompt for CVV Number.



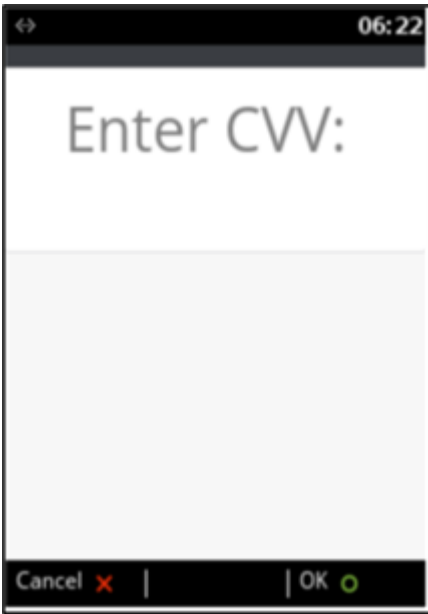

Tap the text box for keyboard input and type the Security Code. Press the green Enter key on the device keyboard.

### Additional Sale Screens

#### Display




#### Description


This is the Card Read screen with payment brands.

## Display

## Description

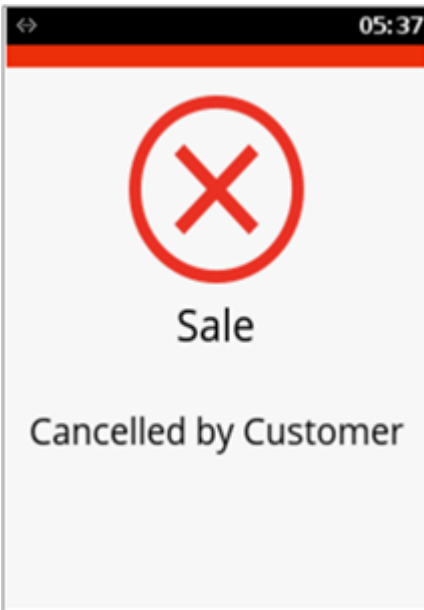

**Cancel by Customer:** This screen will be displayed if the transaction is cancelled manually at any point.

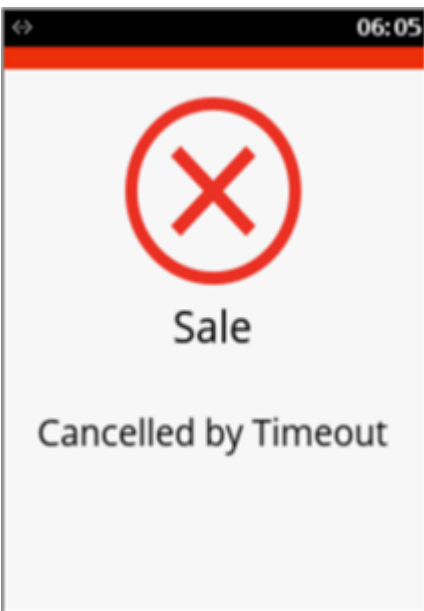


**Cancel by Timeout:** This is the Status screen if the Sale is cancelled due to Time out.

## Refund


### Refund - Tap

## Display


## Description

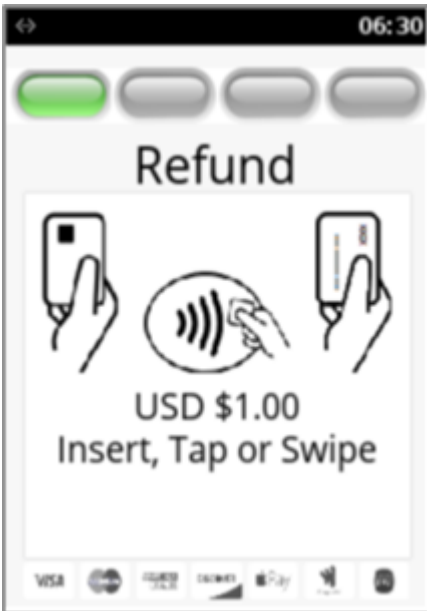


Select the card entry mode: Tap

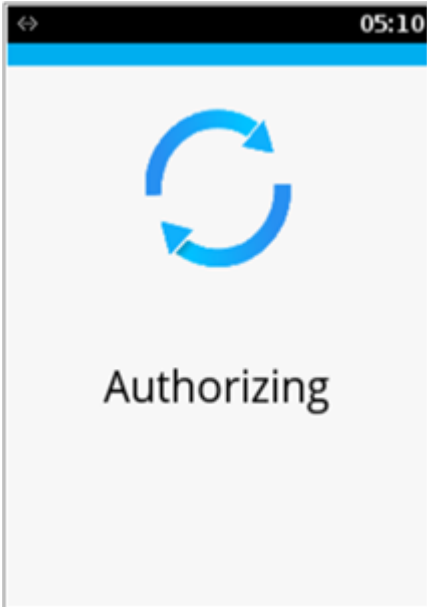

Authorization in progress screen.

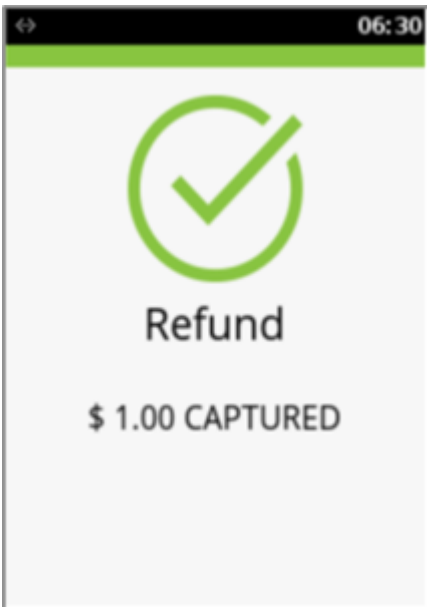

Transaction is approved screen. After the transaction is complete, the device will return to the Idle Screen.

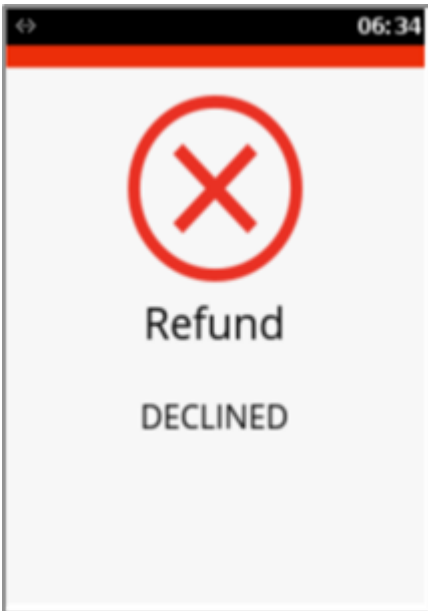


This is the status screen as Refund Declined if the transaction is not approved.

### Refund - Insert

#### Display


#### Description

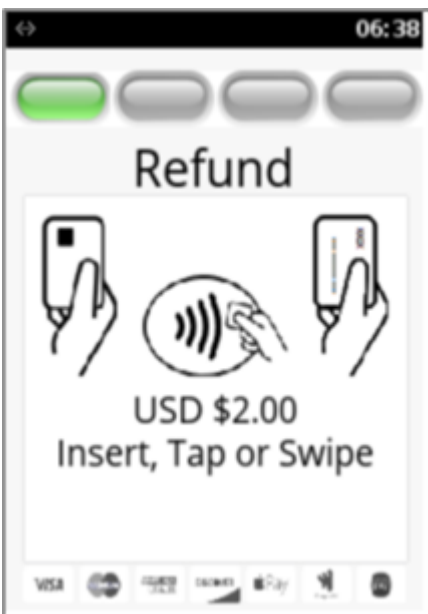


Select the card entry mode: Insert or Swipe

## Display


## Description

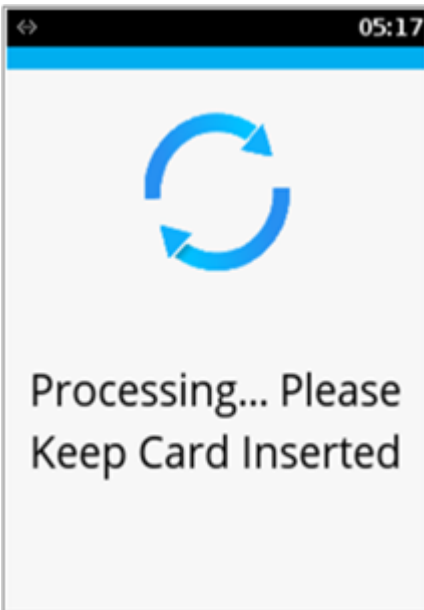

Processing screen and card should be inserted.

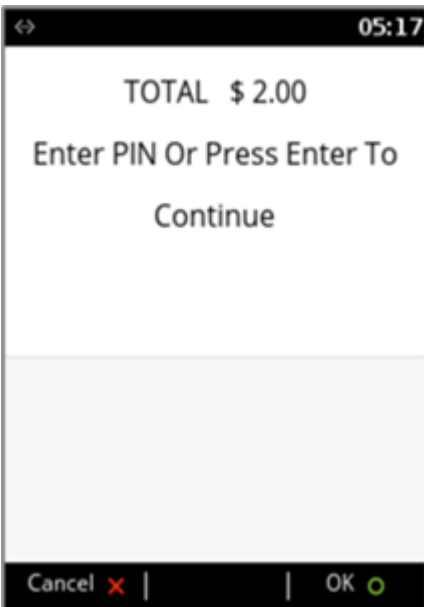


Tap the text box for keyboard input and type the PIN or press the Enter key to continue to next screen.

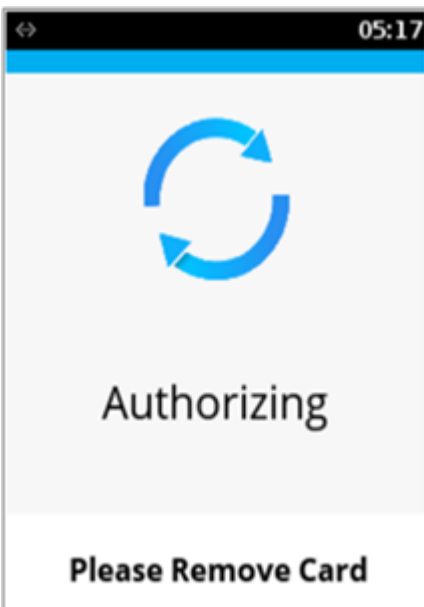


Authorization in progress screen.

**Display**

**Description**

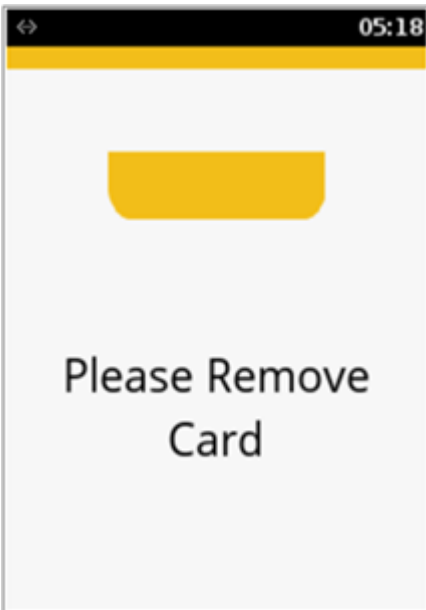

The transaction is completed and the card can be removed. After the card is removed the status screen is displayed, until the next command is sent.

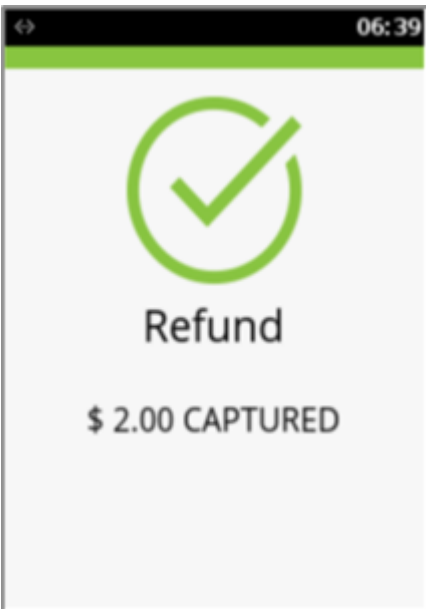


This is the Status screen as Refund Approved.


**Void**

**Display**


**Description**

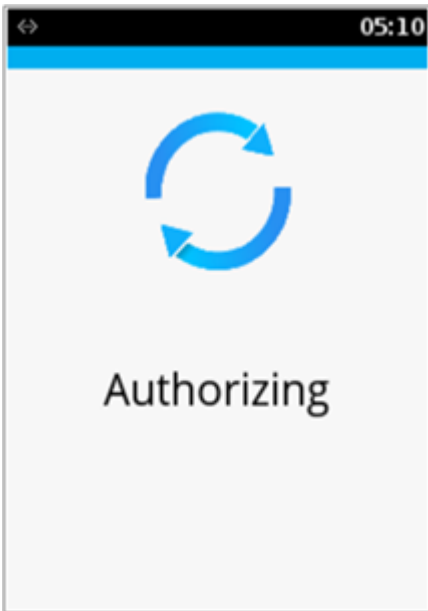

Void transaction is processed, and authorization is in progress screen.

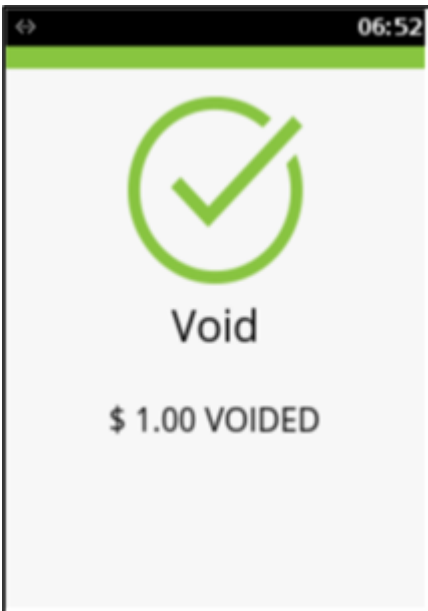

This is the Status screen as Voided (success).

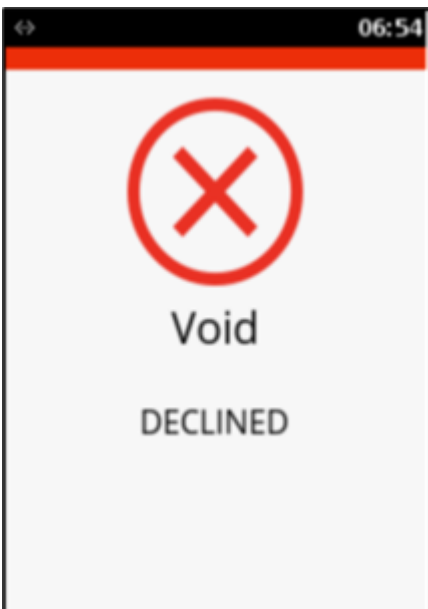



Void declined status screen.

## Optional Screens

Optional Screens are displayed during the Sale flow and these screens can be configured based on required parameters.

### Welcome Screen


Display	Description
	<p>This is the screen within the session when LINEITEMDISPLAY parameter should be set to 0 (disabled) and pre-swipe (SWIPE_AHEAD) field should be sent as 0 (disabled) in Start session command.</p>
	<p>This is the Welcome screen with Card read option.</p>

### Split Tender

Display

Description



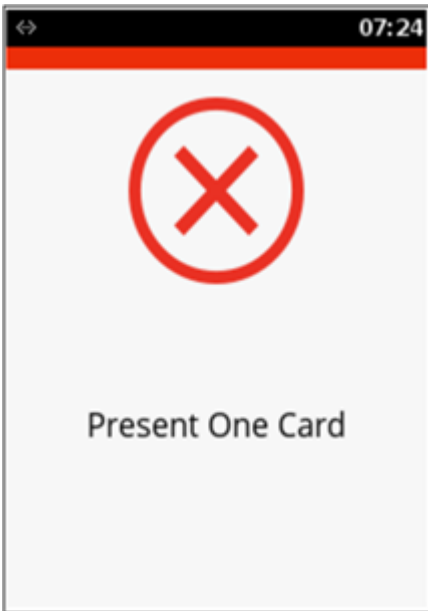


Option to choose if the amount would be divided to two cards.

- Select No to enter the partial amount to pay.
- Select Yes to pay full amount in one card, and Card Read screen would be displayed.

## Cash Back

### Display

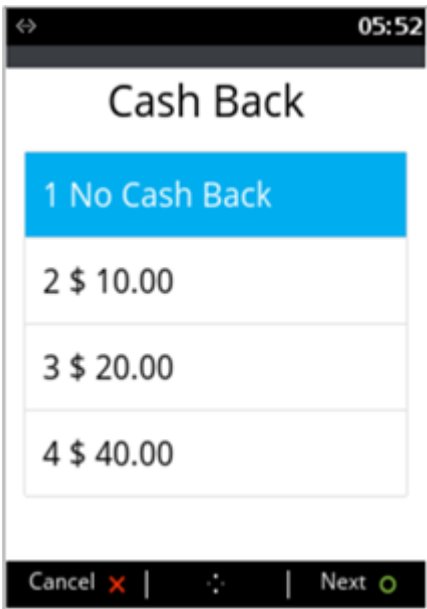


### Description


Select any Cashback amount or No Cash Back option. This selection will prompt for Enter PIN screen. If Other option selected, then Enter Cash Back screen will be prompt.

**Display**

**Description**

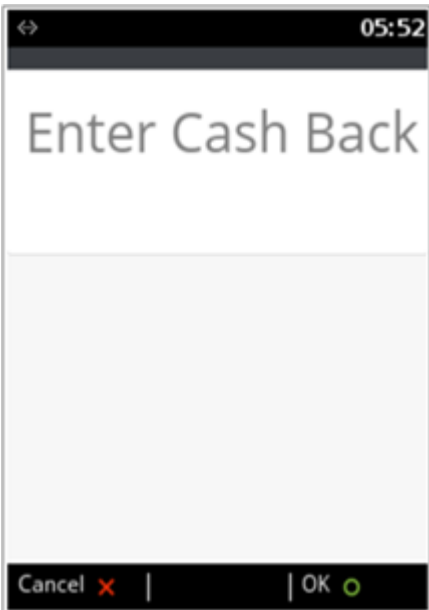

Enter the cashback amount and press OK.

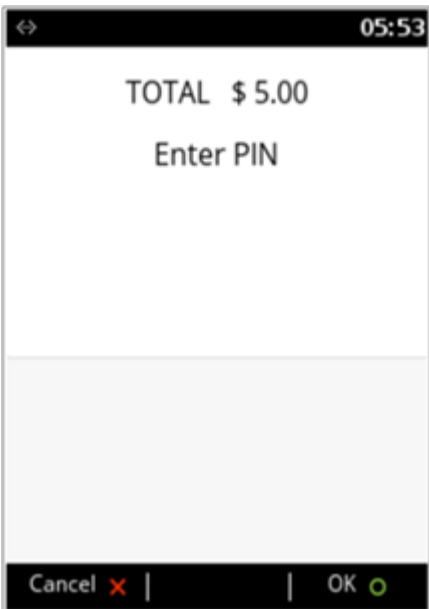


Enter the PIN and press Enter key to prompt for Card Entry screen.

**Card Type/Payment Type Selection**

**Display**


**Description**

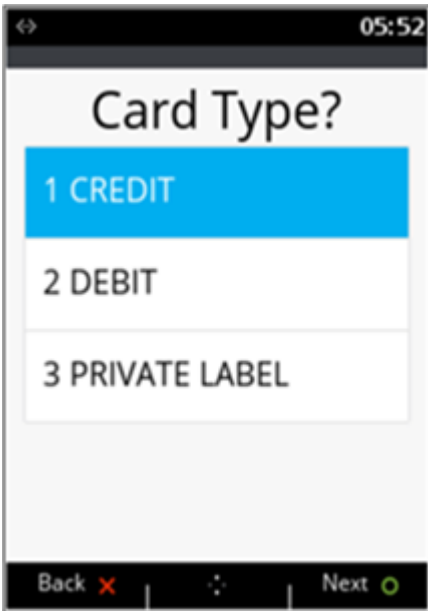

Select the card type.

### Tip Selection

#### Display

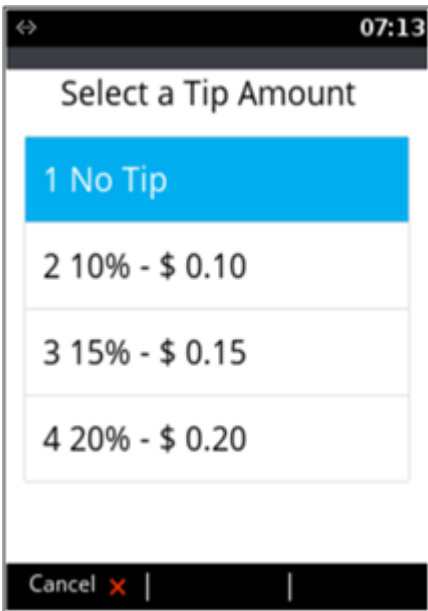


#### Description


Select any predefined Tip amount.

**Display**

**Description**

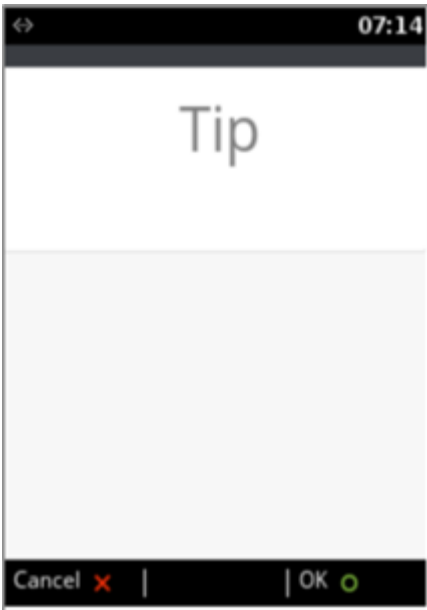

**Custom Tip:** If selected Custom option in Tip Amount screen, then tap the text box for keyboard input.

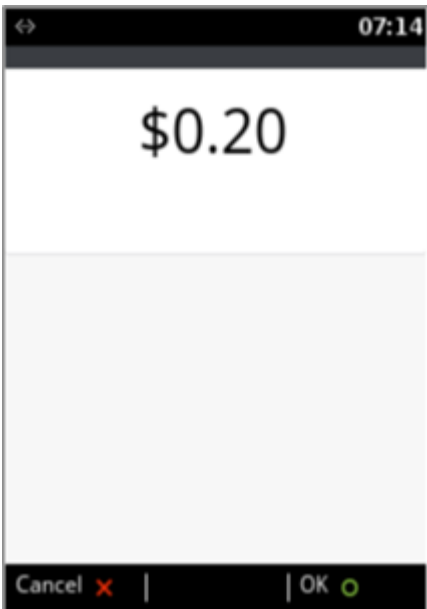


Enter the Tip amount and press OK or Enter key.

**Loyalty Entry Method**

**Display**


**Description**

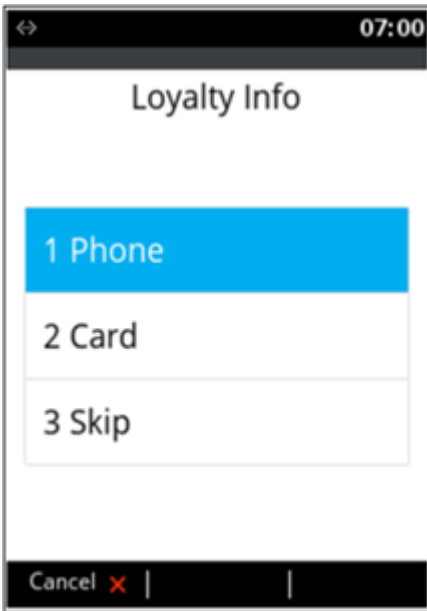

Select **Phone** option to enter phone number or select **Card** option to go to Loyalty Card for card swipe or entering account number. Select **Skip** if Loyalty Entry Method is not required.

### Phone Number

#### Display

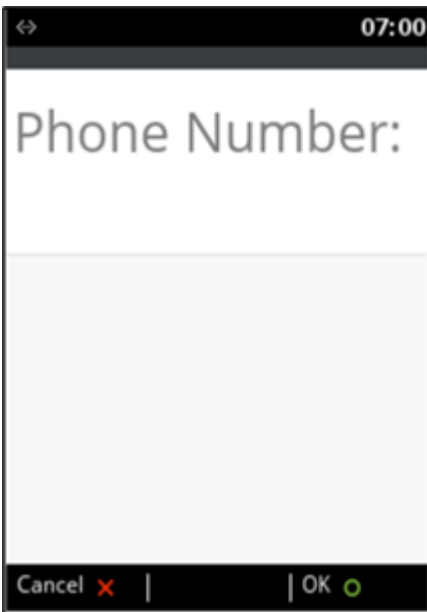


#### Description


Tap the text box for keyboard input and type the phone number.

**Display**

**Description**

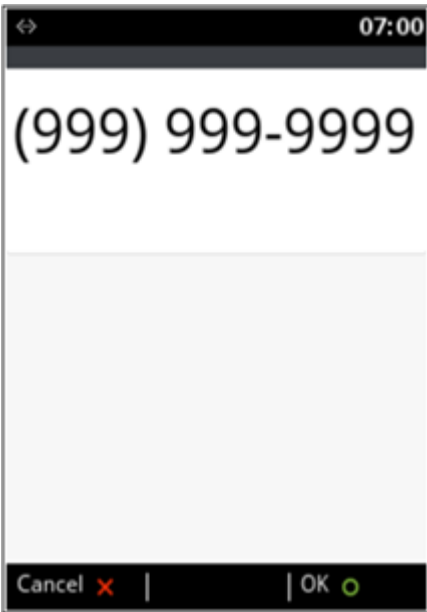

Press Enter to process.

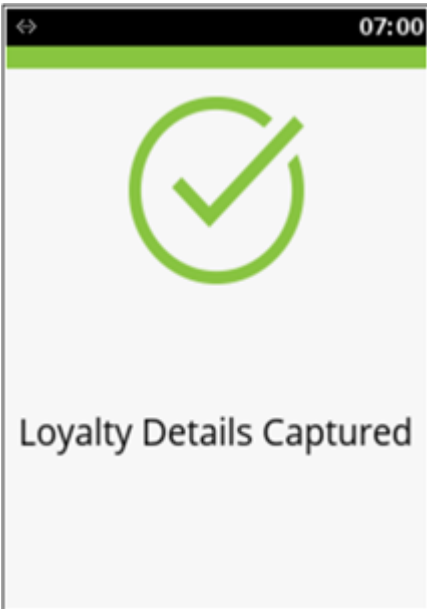


Status screen displays as Loyalty details captured.


**Loyalty Card**

**Display**

**Description**

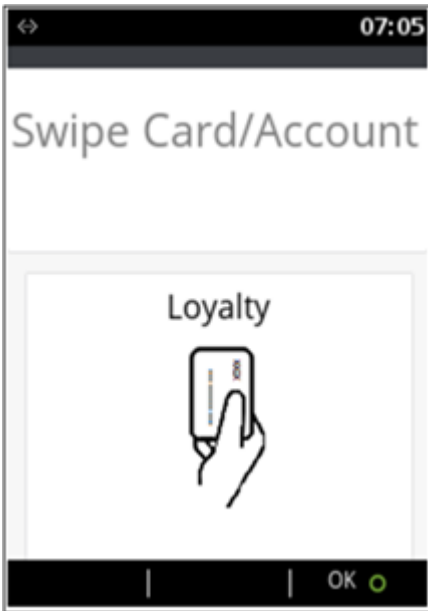

Tap the text box for keyboard input to type the account number or Swipe the card.

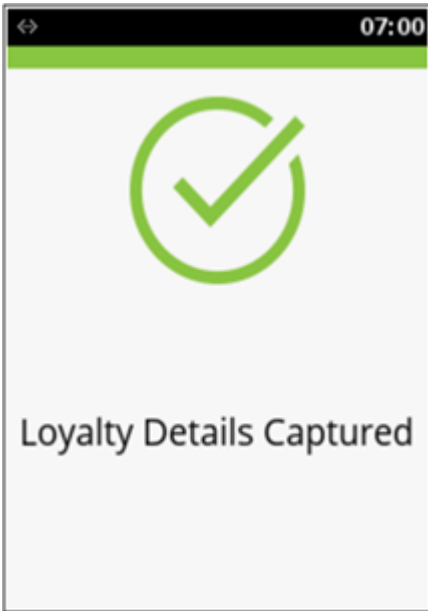

Status screen displays as Loyalty details captured.

## Device Command Screens

Note

Survey 5 and Survey 10 screens are not applicable to P200 and V200 terminals since these are not having touch screen.

**Display**

**Description**

02:43

WOULD YOU LIKE TO CONTRIBUTE TO RONALD MCDONALD HOUSE TODAY?

1 \$5.00

2 \$10.00

3 \$15.00

X | | O

Charity Donation.

03:21

WOULD YOU LIKE TO SIGN UP FOR EMAIL COUPONS

No X | | Yes O

Customer Question.

02:47

PLEASE SELECT THE COMPANY YOU HAVE WORKED IN YOUR CAREER IN INDIA.

(1) WORLD MARKETING (2) VERIFONE

(3) FIRSDATA (4) TSYS

(5) WIPRO (6) GIRMITI

Cancel X | |

Customer Button.



A mobile application interface with a black header bar containing a back arrow and the time 03:23. The main content area has a light gray background with the text "PLEASE ENTER YOUR NAME" in bold black font. Below the text is a white text input field with a thin gray border containing the text "DAVID" and a vertical cursor at the end.


**Credit Application** - Tap the text box for keyboard input to type the name.

A mobile application interface with a black header bar containing a back arrow and the time 03:25. The main content area has a light gray background with the text "PLEASE ENTER YOUR PHONE" in bold black font. Below the text is a white text input field with a thin gray border containing the text "(999)425-7859" and a vertical cursor at the end.


**Credit Application** - Tap the text box for keyboard input to type the phone number. Once the number is added then press Enter.

A mobile application interface with a black header bar containing a back arrow and the time 03:25. The main content area has a light gray background with the text "PLEASE ENTER YOUR GROSS" in bold black font. Below the text is a white text input field with a thin gray border containing the text "\$589470.00" and a vertical cursor at the end.

**Credit Application** - Tap the text box for keyboard input to type the gross income and press Enter to confirm.

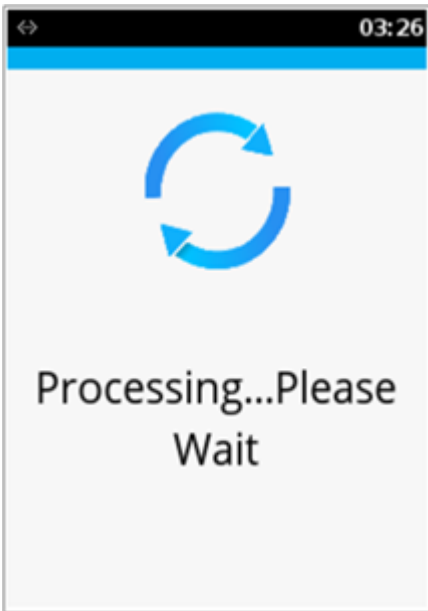


**Credit Application** - Processing the details.

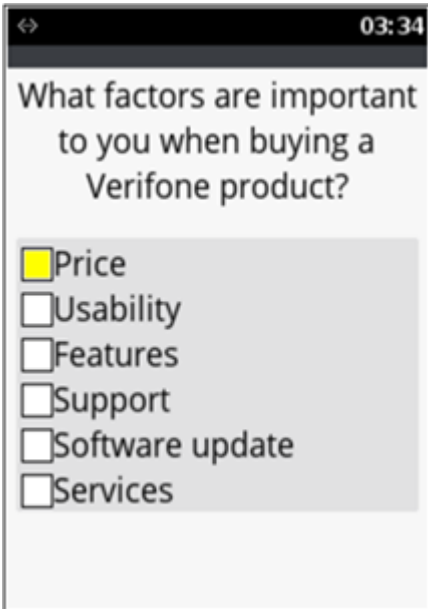

Check box.



Display message.

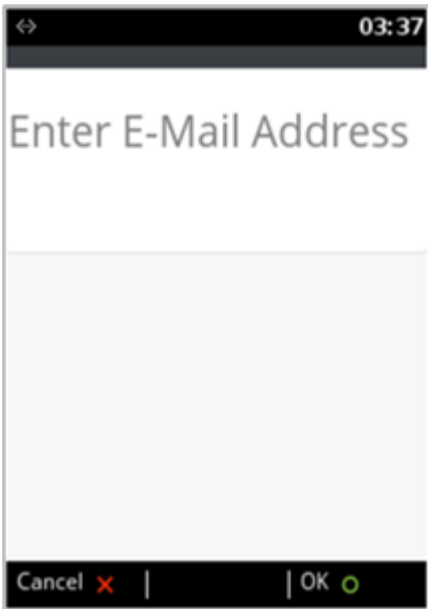

Enter the Email address.



Press Ok or Enter.



This screen is not supported in P200/V200.