



Configuring Static IP


The user can configure the Static connection type by using Com Control Panel (CCP) and following steps are provided with respect to LAN configuration.

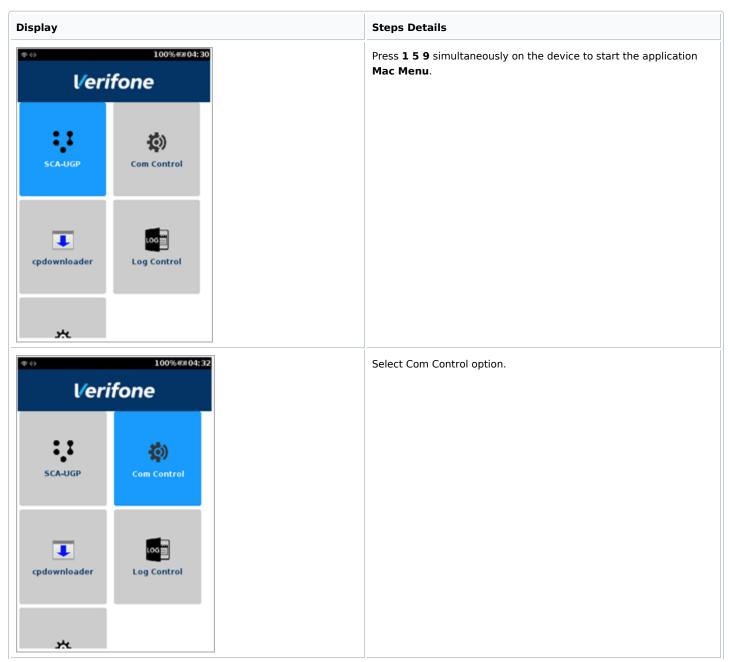

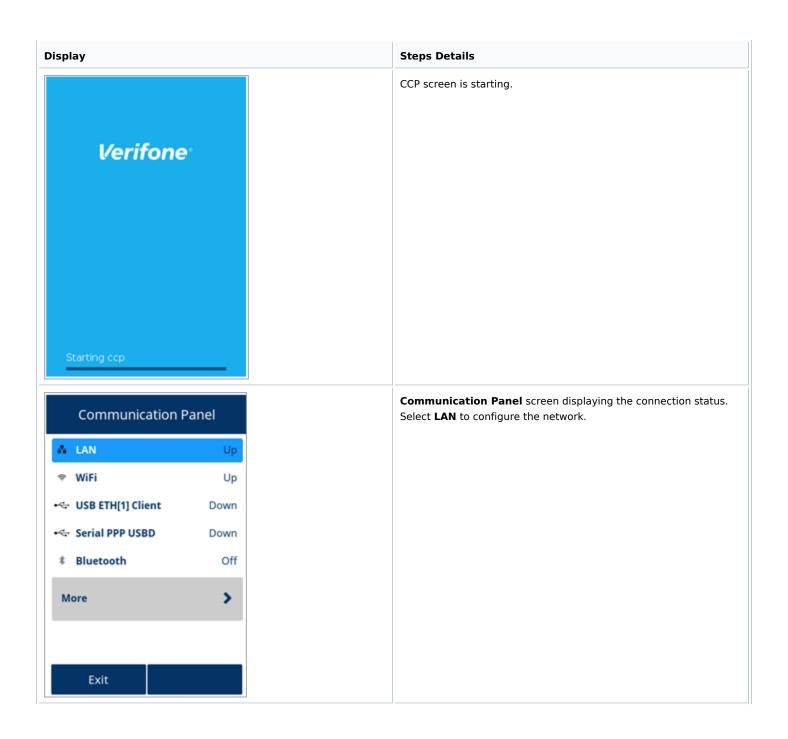







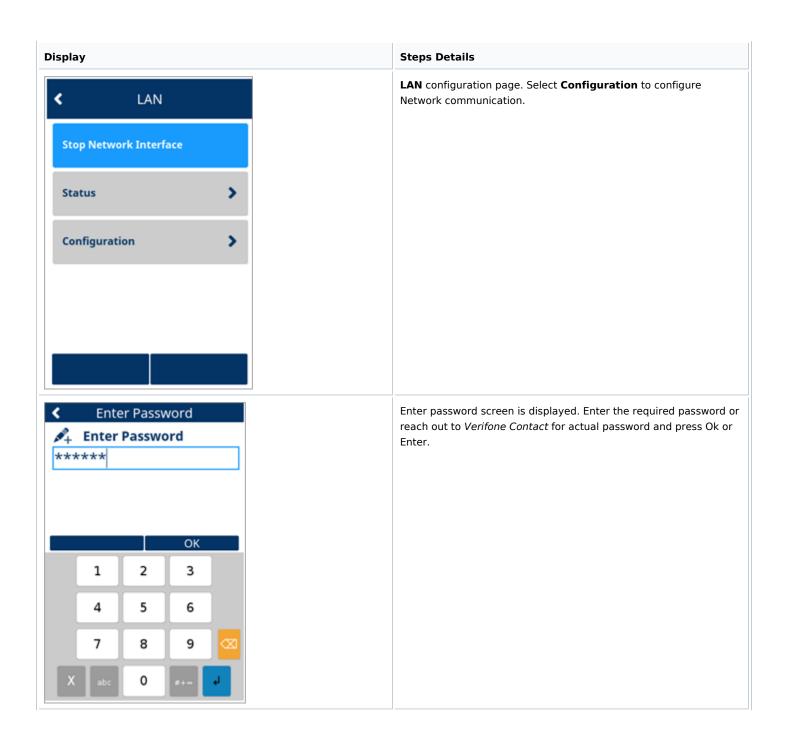




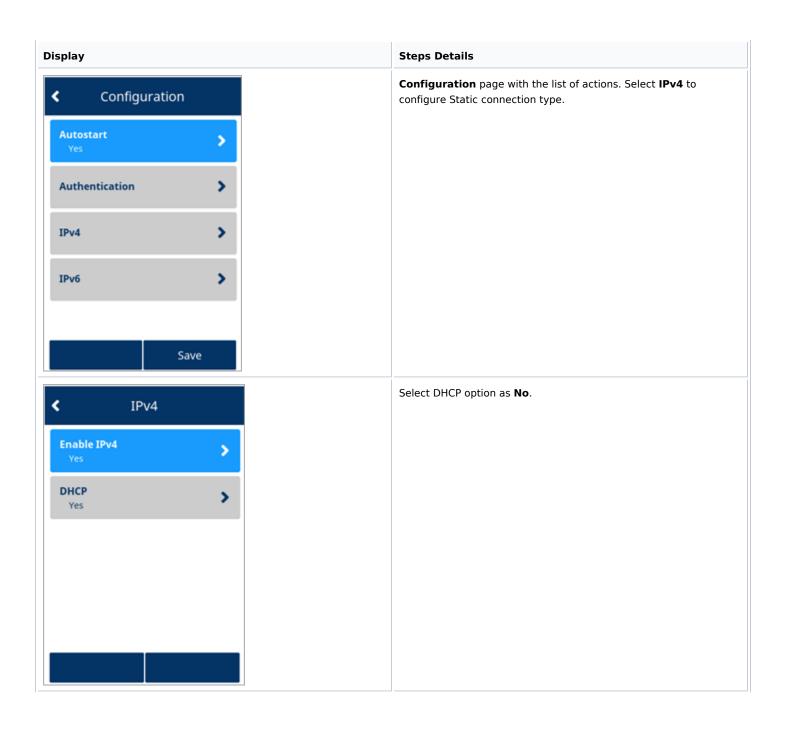




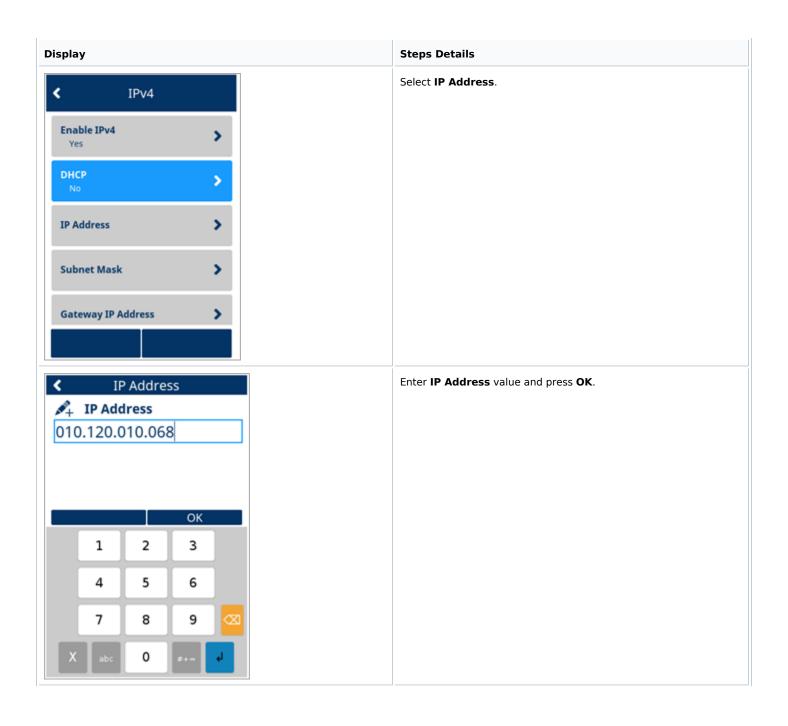




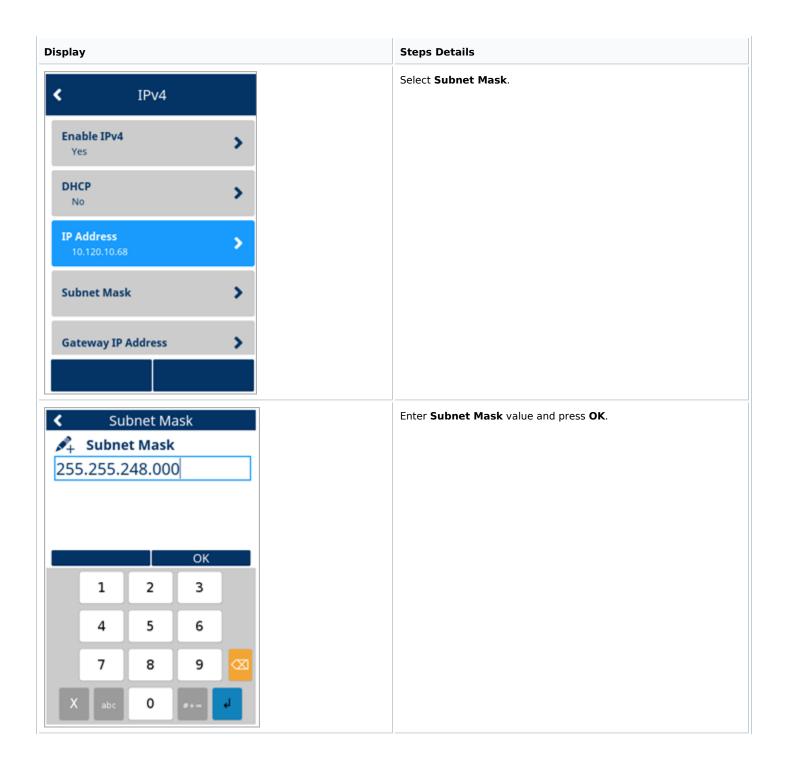




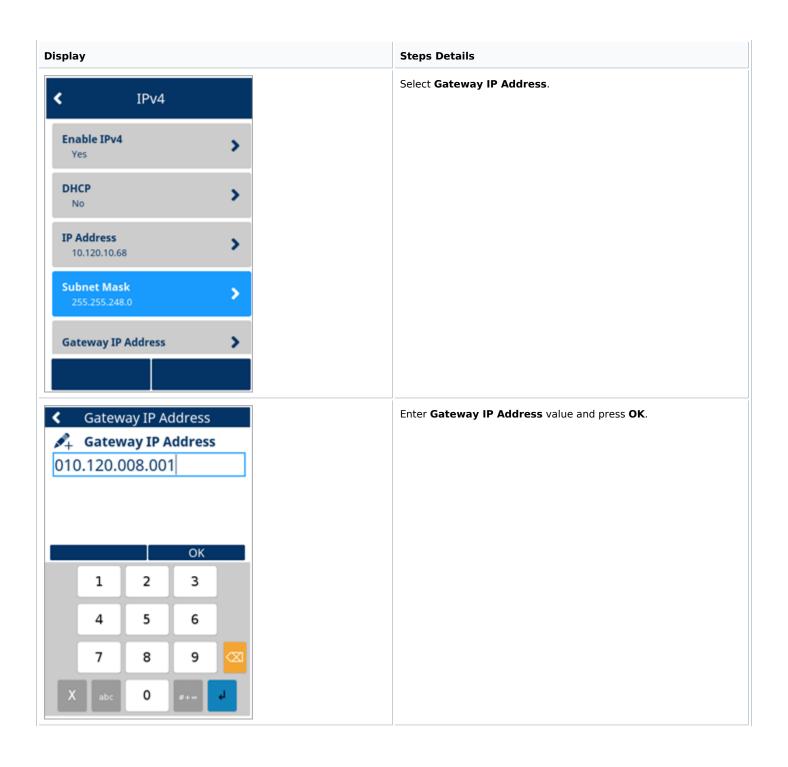




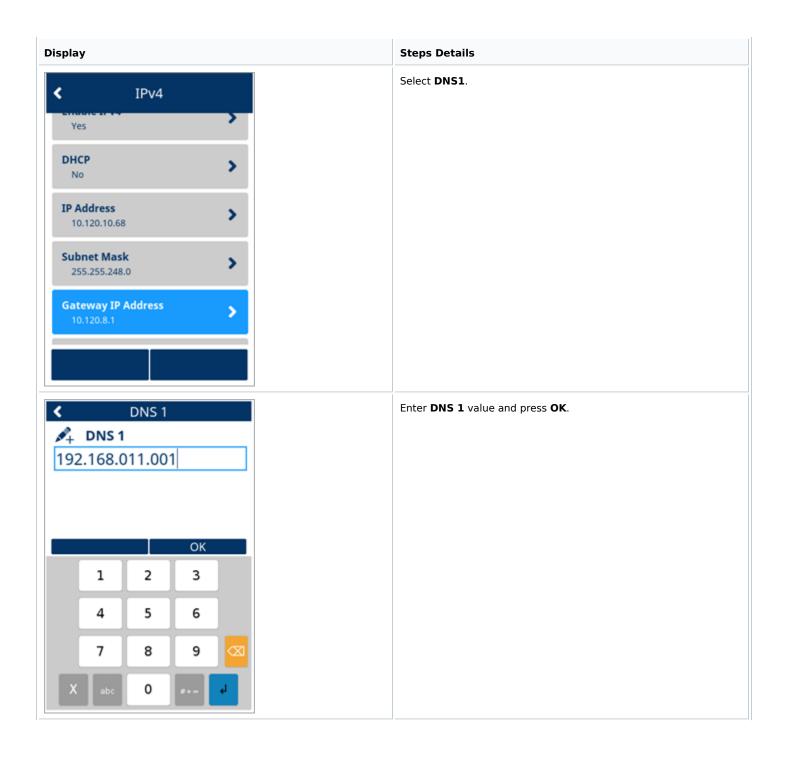




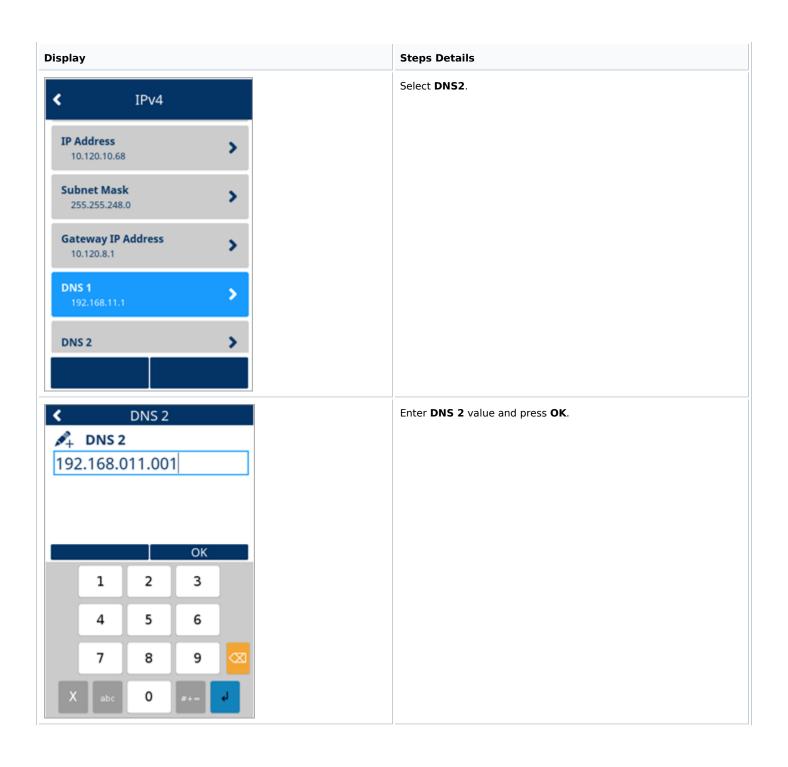




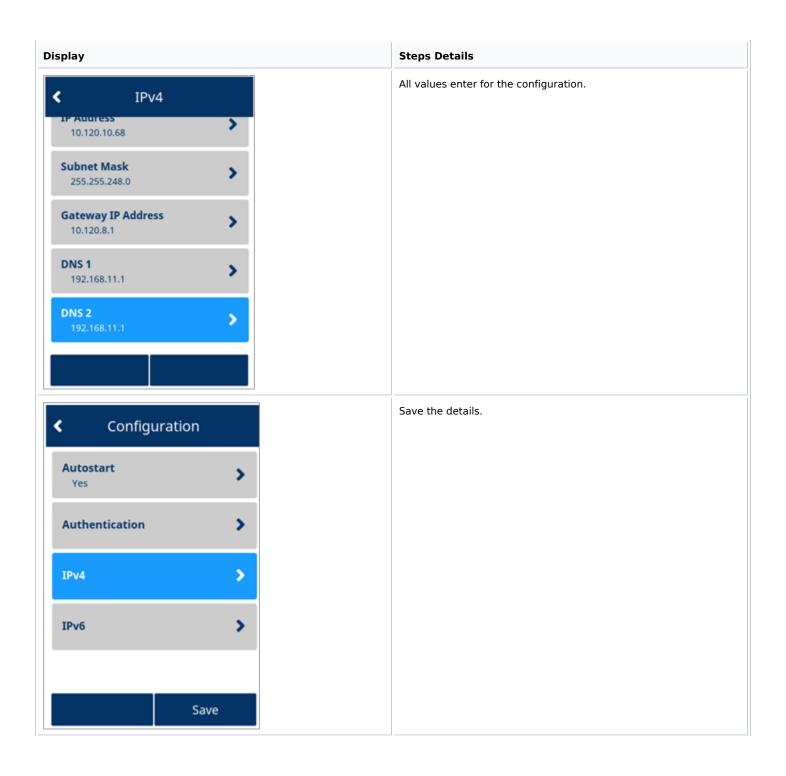



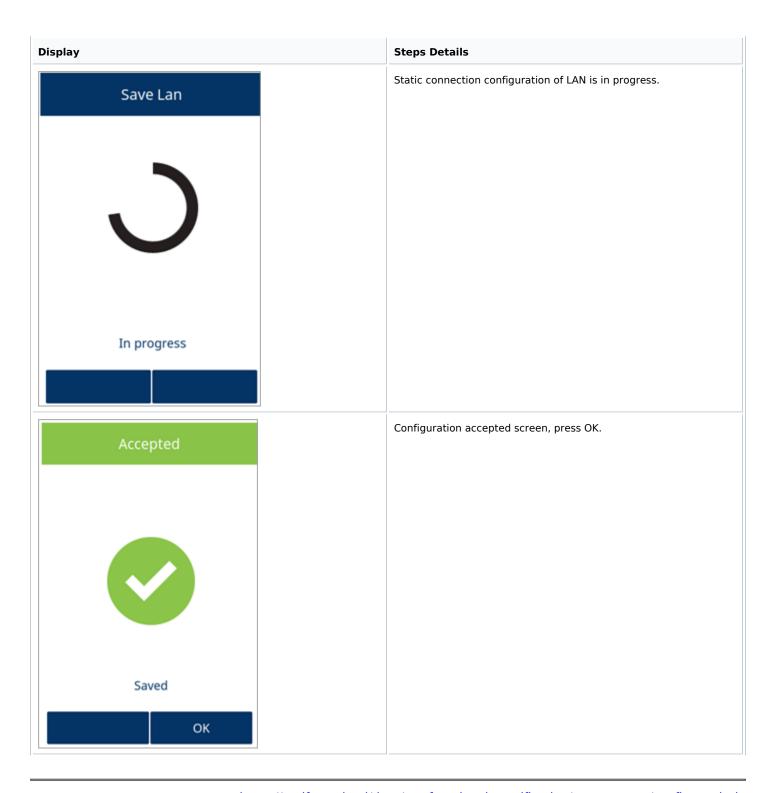



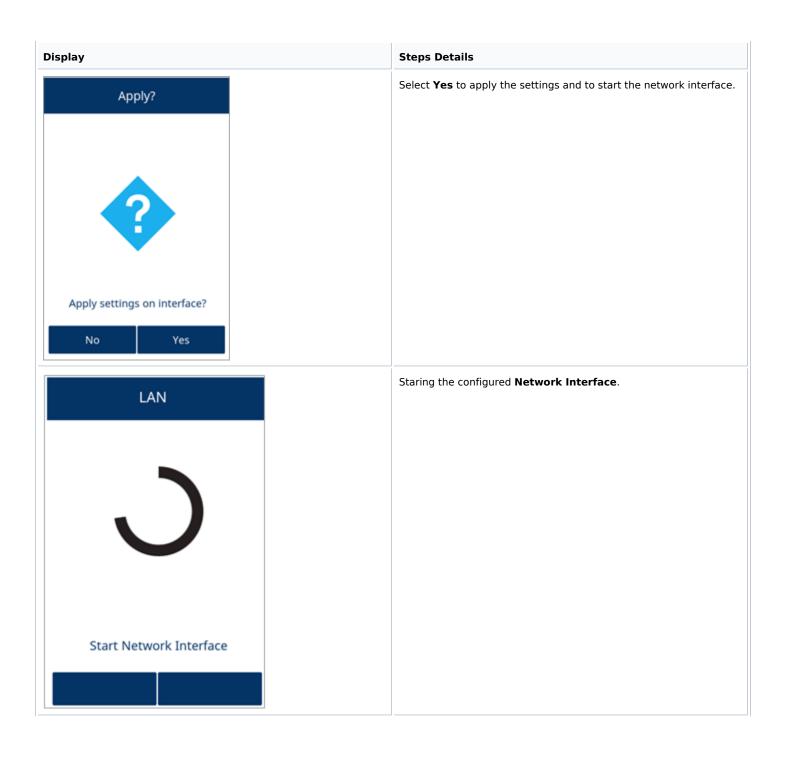



Display	Steps Details
Accepted	The Static connection for LAN is configured. Press OK and reboot the device to apply the changes and check the status.
Interface started	
ок	