



Claiming your machine

To access this device you will need to claim it. This is the default screen that you should see when you first start an OakOS device.

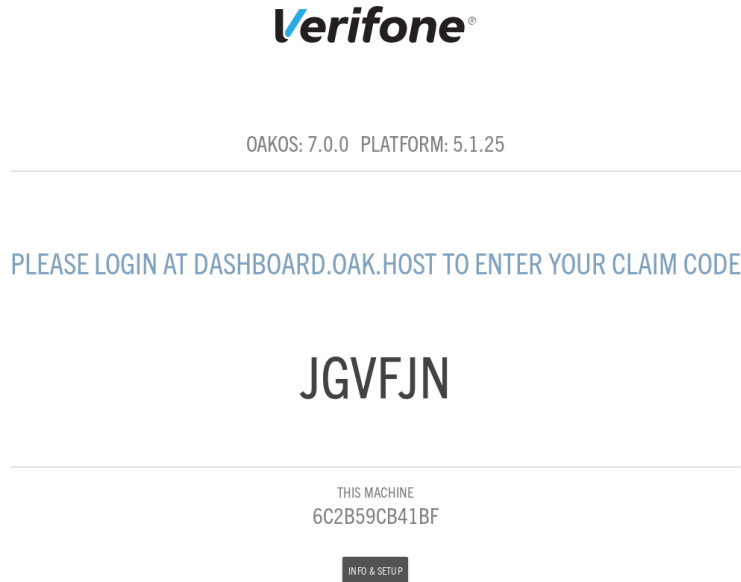

Next, you can open the OakOS Dashboard API and click open the "Claim" folder. Add the environmental variables `claimMachine` and `claimDomain` to your settings.

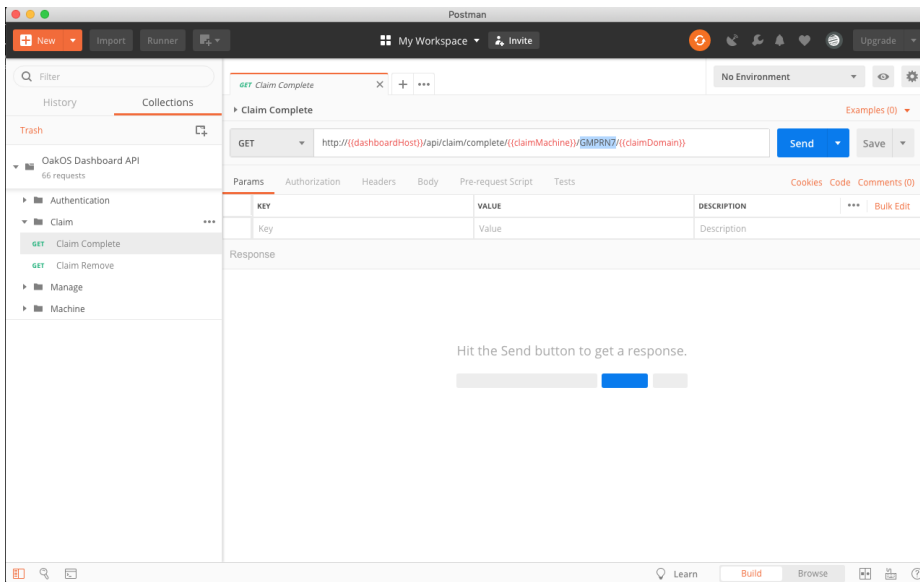

You will need to put the code displayed on the screen into the place in the url that is highlighted. A successful is shown below.

```
{  
  "success": true  
}
```

The screen should now look like this



OAKOS: 7.0.0 PLATFORM: 5.1.25

THIS UNIT IS ALREADY CLAIMED, PLEASE VISIT THE DETAILS PAGE FOR THIS UNIT TO UNCLAIM IT.

THIS MACHINE
6C2B59CB41BF

INFO & SETUP