Configuring Static IP

The user can configure the Static connection type by using Com Control Panel (CCP) and following steps are provided with respect to LAN configuration.

Display	Steps Details
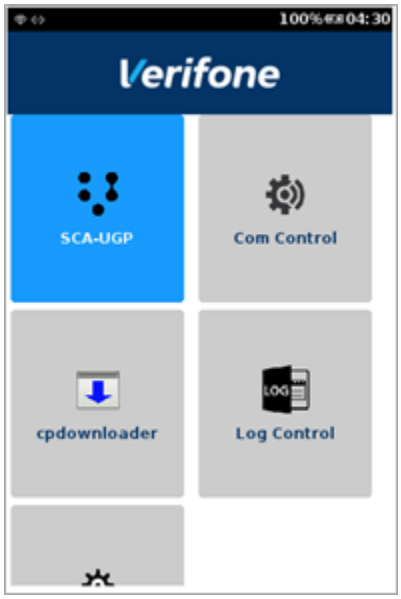	Press **1 5 9** simultaneously on the device to start the application **Mac Menu**.
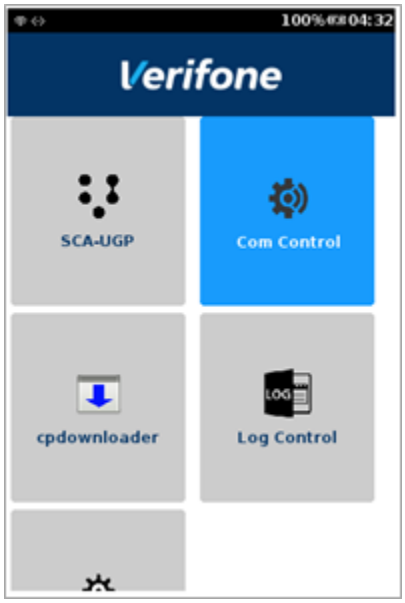	Select Com Control option.

Display	Steps Details
	CCP screen is starting.
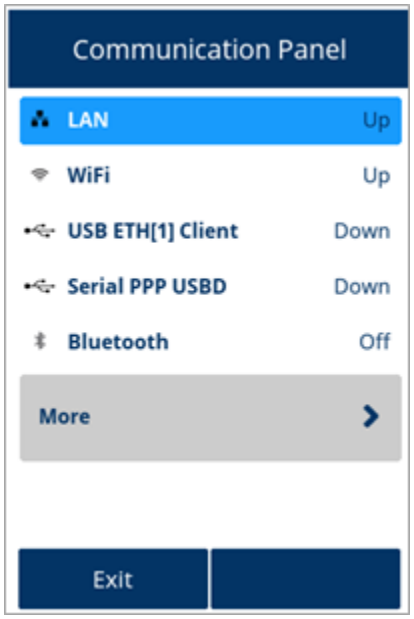	**Communication Panel** screen displaying the connection status. Select **LAN** to configure the network.

Display	Steps Details
	LAN configuration page. Select **Configuration** to configure Network communication.
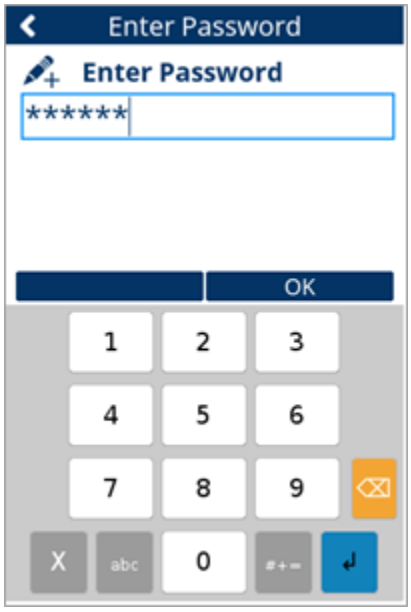	Enter password screen is displayed. Enter the required password or reach out to *Verifone Contact* for actual password and press Ok or Enter.

Display	Steps Details
	Configuration page with the list of actions. Select **IPv4** to configure Static connection type.
	Select DHCP option as **No**.

Display	Steps Details
	Select **IP Address**.
	Enter **IP Address** value and press **OK**.

Display	Steps Details
	Select **Subnet Mask**.
	Enter **Subnet Mask** value and press **OK**.

Display	Steps Details
	Select **Gateway IP Address**.
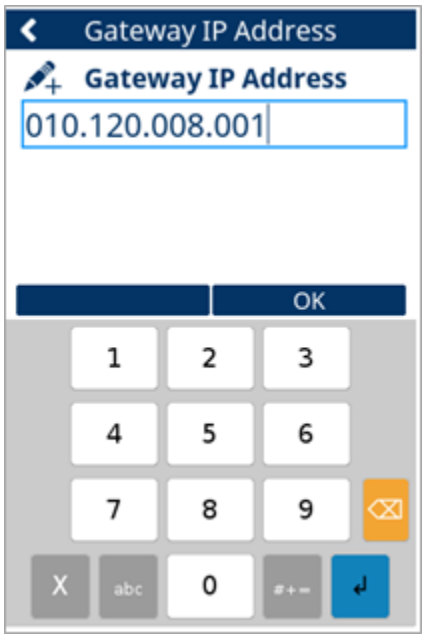	Enter **Gateway IP Address** value and press **OK**.

Display	Steps Details
	Select **DNS1**.
	Enter **DNS 1** value and press **OK**.

Display	Steps Details
	Select **DNS2**.
	Enter **DNS 2** value and press **OK**.

Display	Steps Details
	All values enter for the configuration.
	Save the details.

Display	Steps Details
	Static connection configuration of LAN is in progress.
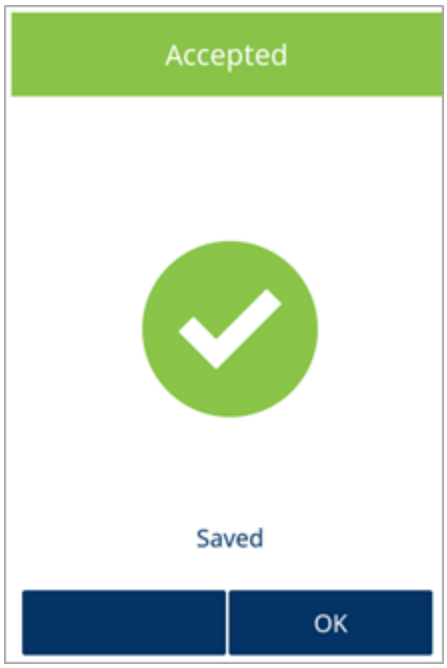	Configuration accepted screen, press OK.

Display	Steps Details
	Select **Yes** to apply the settings and to start the network interface.
	Staring the configured **Network Interface**.

Display	Steps Details
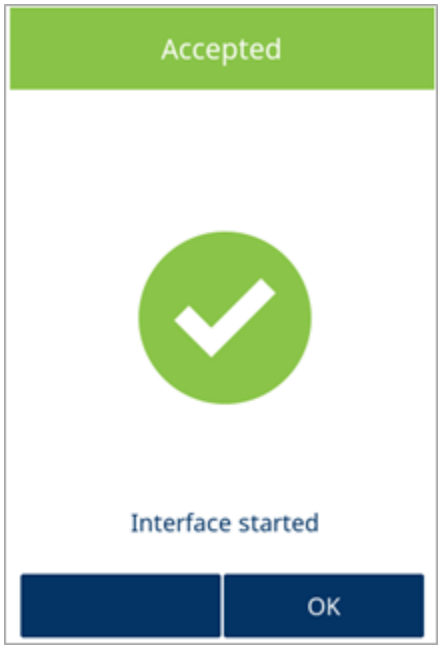	The Static connection for LAN is configured. Press **OK** and reboot the device to apply the changes and check the status.